

# Linux Driver Installation Documentation

## Contents

Linux Driver Installation Documentation.....	1
Overview: .....	2
1, Unzip the "KPOS_Printer.tar.gz" file.....	2
2, Enter the "./KPOS_Printer/filter" folder.....	2
3, Execute "install.sh" file as sudo or root.....	2
4, Installation method one:.....	2
5, Installation method two: .....	10
6, Instructions.....	17
7, Parameter options.....	17

## Overview:

This driver is based on CUPS universal UNIX Printing System, which support from serial port, parallel port, USB and Ethernet port. It also support printing text format, picture format and grating bitmap.


1, Unzip the “KPOS\_Printer.tar.gz” file

2, Enter the “./KPOS\_Printer/filter” folder

```
itcash@itcash:~$ ls
公共的 模板 视频 图片 文档 下载 音乐 桌面 app KPOS_Printer KPOS_Printer.tar.gz
itcash@itcash:~$ cd KPOS_Printer/filter/
itcash@itcash:~/KPOS_Printer/filter$ ls
32 64 install.sh
itcash@itcash:~/KPOS_Printer/filter$
```

3, Execute “install.sh” file as sudo or root


```
itcash@itcash:~$ ls
公共的 模板 视频 图片 文档 下载 音乐 桌面 app KPOS_Printer KPOS_Printer.tar.gz
itcash@itcash:~$ cd KPOS_Printer/filter/
itcash@itcash:~/KPOS_Printer/filter$ ls
32 64 install.sh
itcash@itcash:~/KPOS_Printer/filter$ sudo ./install.sh
[sudo] itcash 的密码:
itcash@itcash:~/KPOS_Printer/filter$
```




Note: If it fails, you need to add executable permissions to install.sh and execute it again.

4, Installation method one:


4.1, Please open the CUPS local port: 127.0.0.1:631

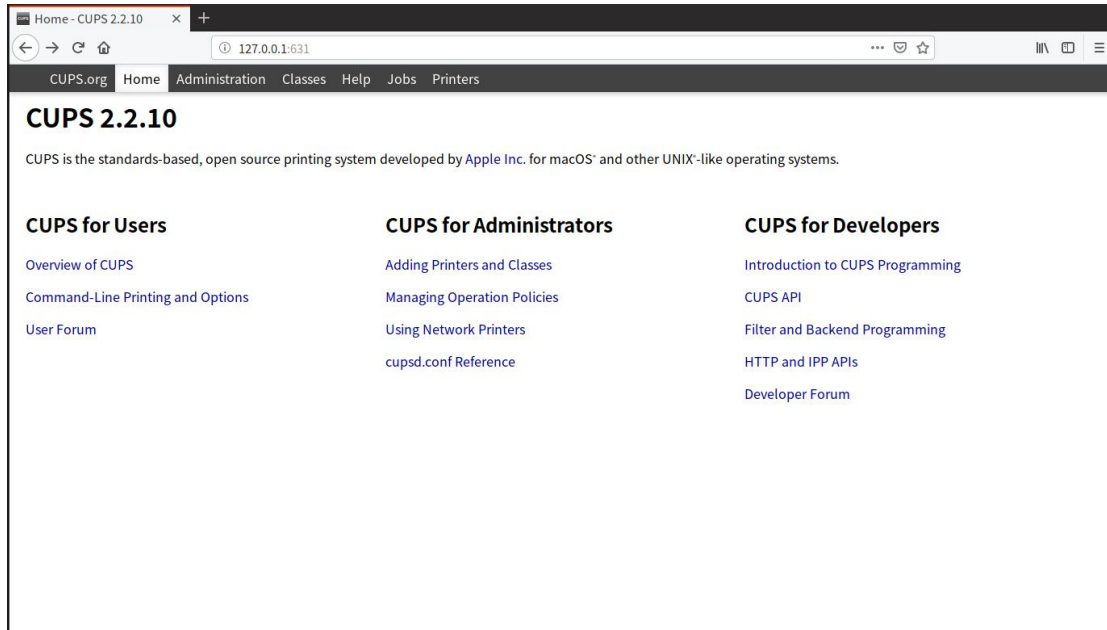


#### 4.2, Click and enter the interface: Adding Printers and Classes

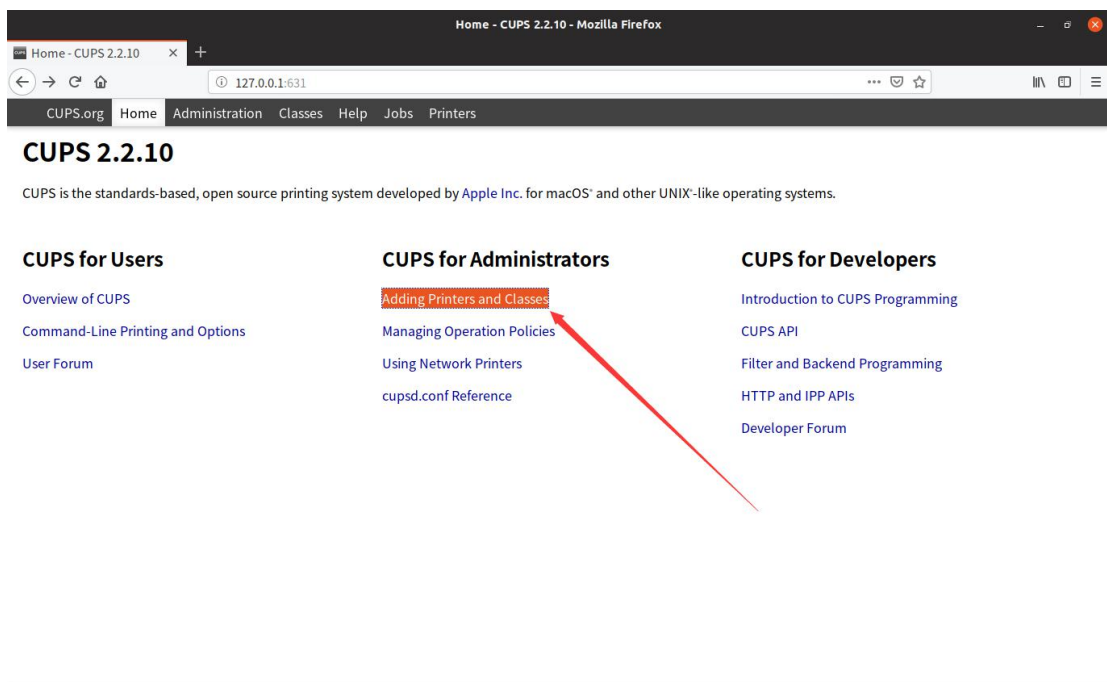


#### 4.3, Select the option: Add Printer

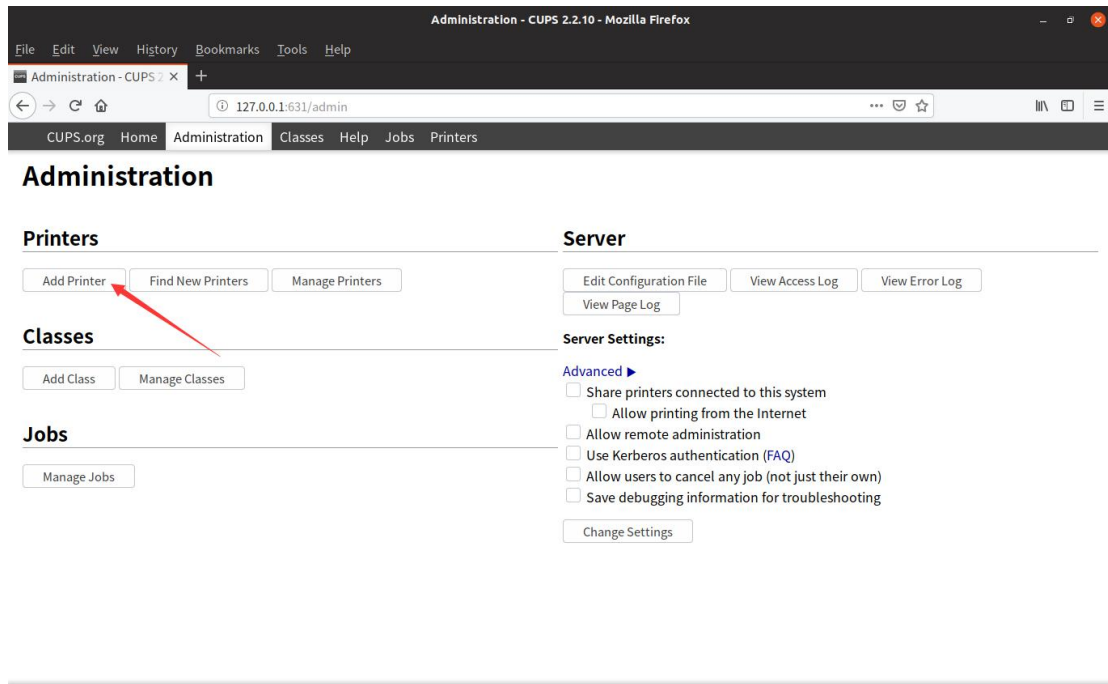

4.4, Enter the current user information.

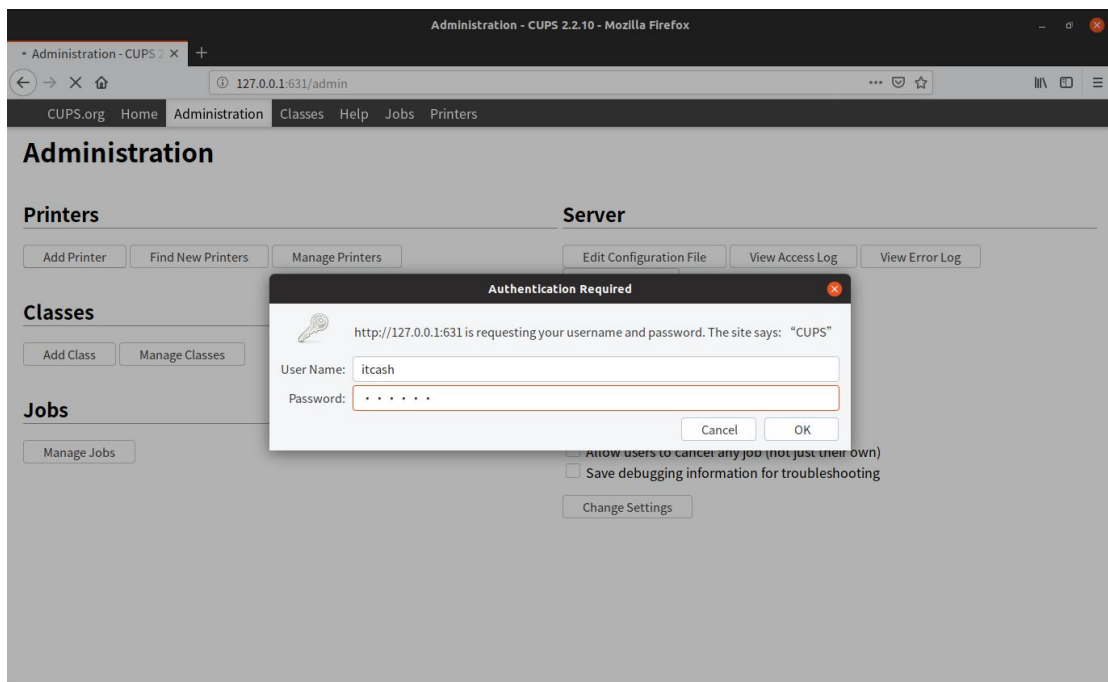


4.5, Select the correct printing port, then click: Continue

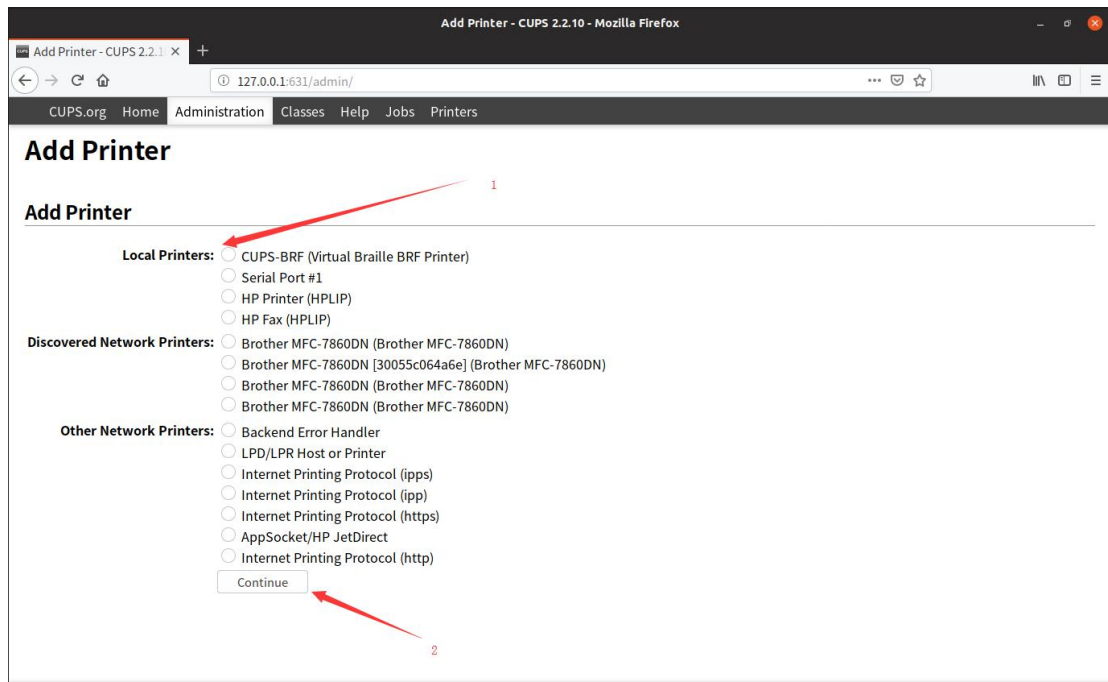

Note 1: If you printing from USB port, the printer must be connected to Linux first before execute installation. The identification process can take a few seconds to a dozen seconds, USB printing port mode is shown as: Unknown. USB virtual serial port is shown as: USB Serial Port, the parameters can be selected by default.

Note 2: If it doesn't enumerate the corresponding port, it's due to the insufficient interface permission, you need to open the limit rw of the corresponding interface right. Take the serial port 1 as example: `sudo chmod a+rw /dev/ttyS0`.

#### 4.6, Configuring port parameters, then click: Continue

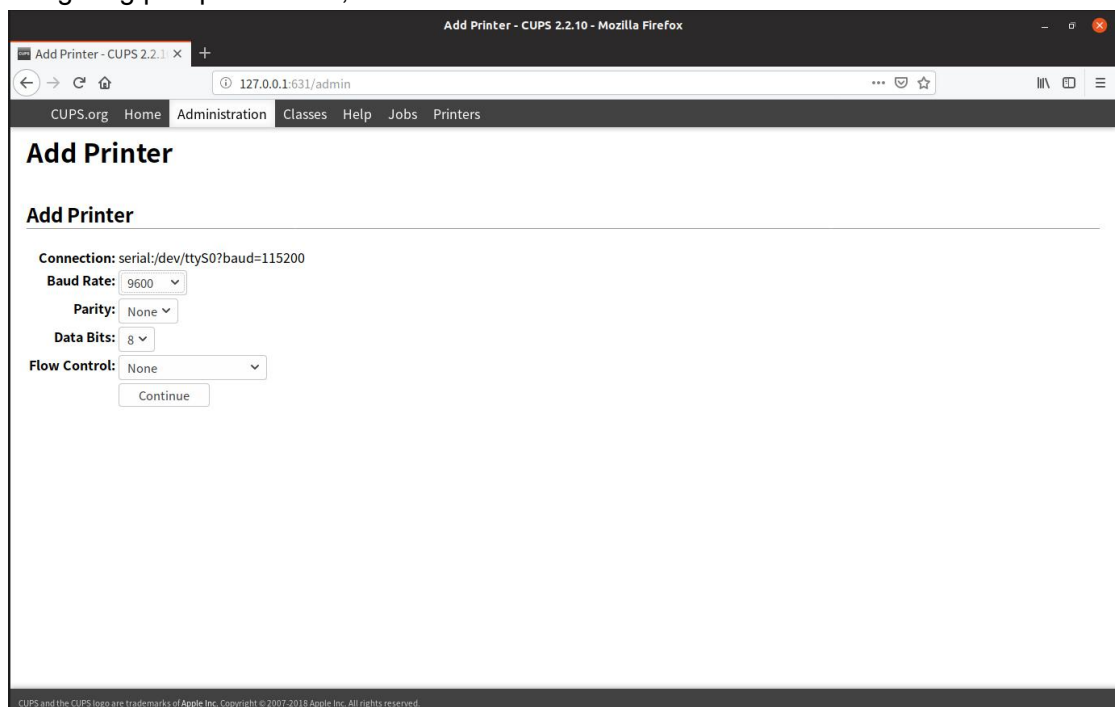

#### 4.7, Configuring printer name information, then click: Continue

, \"#\", and space)'), 'Description:' (with a note: '(Human-readable description such as \"HP LaserJet with Duplexer\")'), 'Location:' (with a note: '(Human-readable location such as \"Lab 1\")'), and 'Connection: serial:/dev/ttyS0?baud=115200'. There is a 'Sharing:' checkbox labeled 'Share This Printer' which is unchecked. A 'Continue' button is at the bottom right of the form."/>

**Add Printer**

**Name:** POS-58  
(May contain any printable characters except "/", "#", and space)

**Description:**  
(Human-readable description such as "HP LaserJet with Duplexer")

**Location:**  
(Human-readable location such as "Lab 1")

**Connection:** serial:/dev/ttyS0?baud=115200

**Sharing:** ☐ Share This Printer

[Continue](#)

#### 4.8, Select "PPD" mode to install.

**Add Printer**

**Name:** POS-58

**Description:**

**Location:**

**Connection:** serial:/dev/ttyS0?baud=115200


**Sharing:** Do Not Share This Printer

**Make:** (Fuji Xerox)  
Alps  
Anitech  
Apollo  
Apple  
Brother  
Canon  
CIAAT  
Citizen  
Citoh


**Or Provide a PPD File:** [Browse...](#) No file selected.

[Add Printer](#)


#### 4.9, Select the corresponding PPD file under the KPOS\_Printer folder, 58mm printer choose the "KPOS-58C.ppd", 80mm printer choose the "KPOS\_80C.ppd", and then click: Add Printer

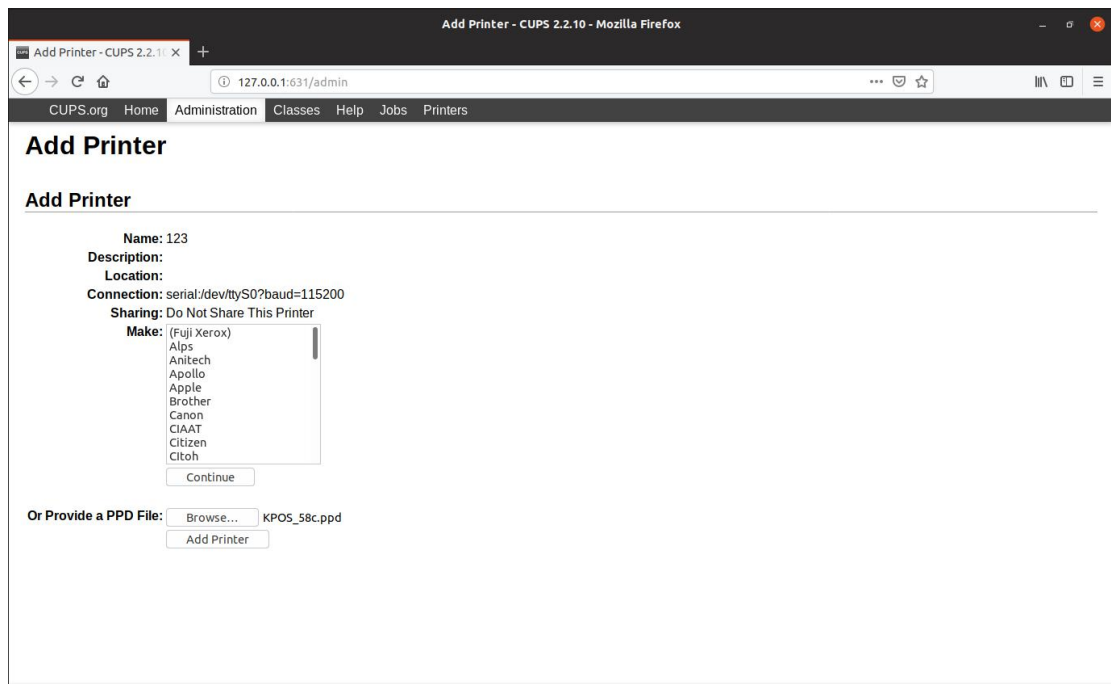


4.10, Prompt to add successfully.

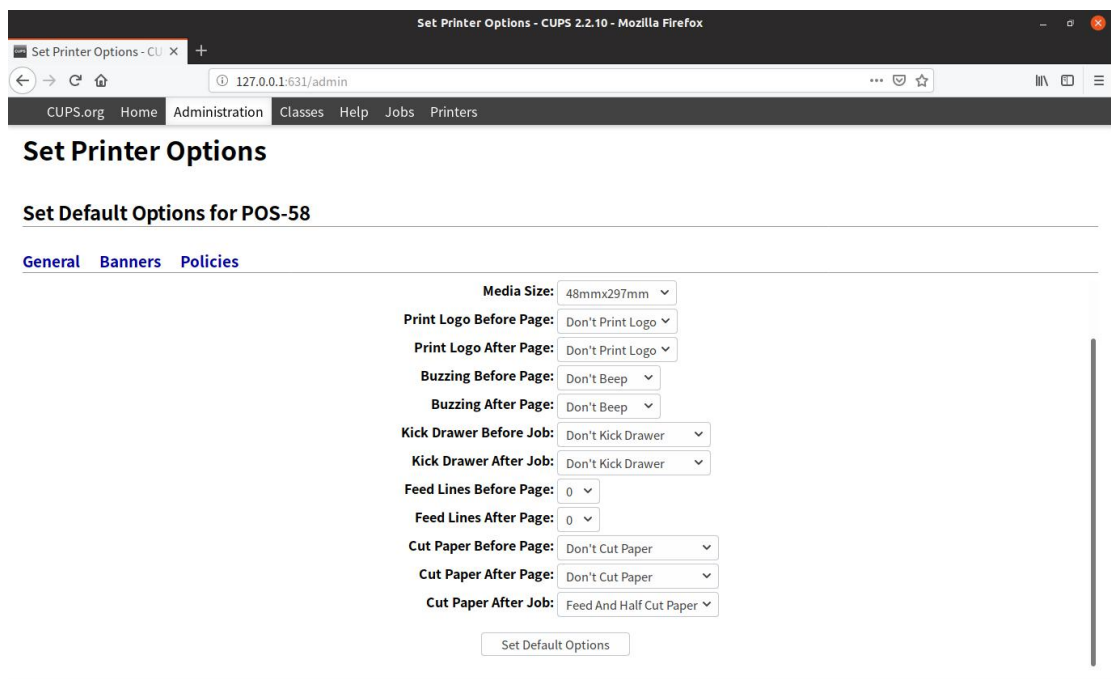

4.11 Enter the settings print interface, print the self-test page to test the printer's situation.

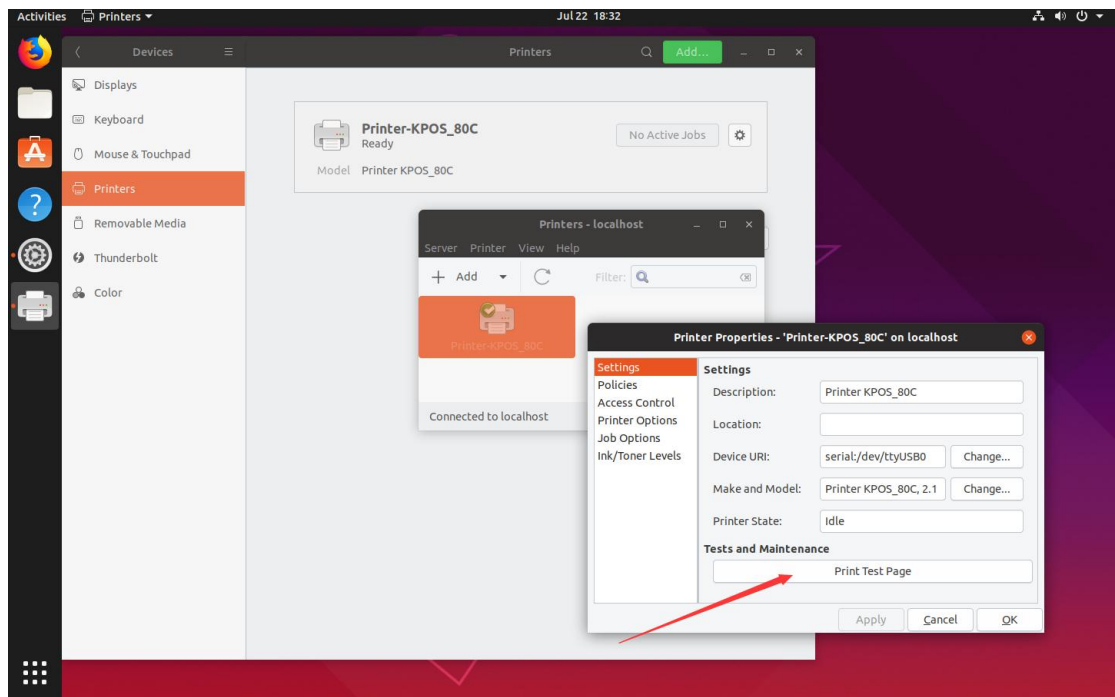



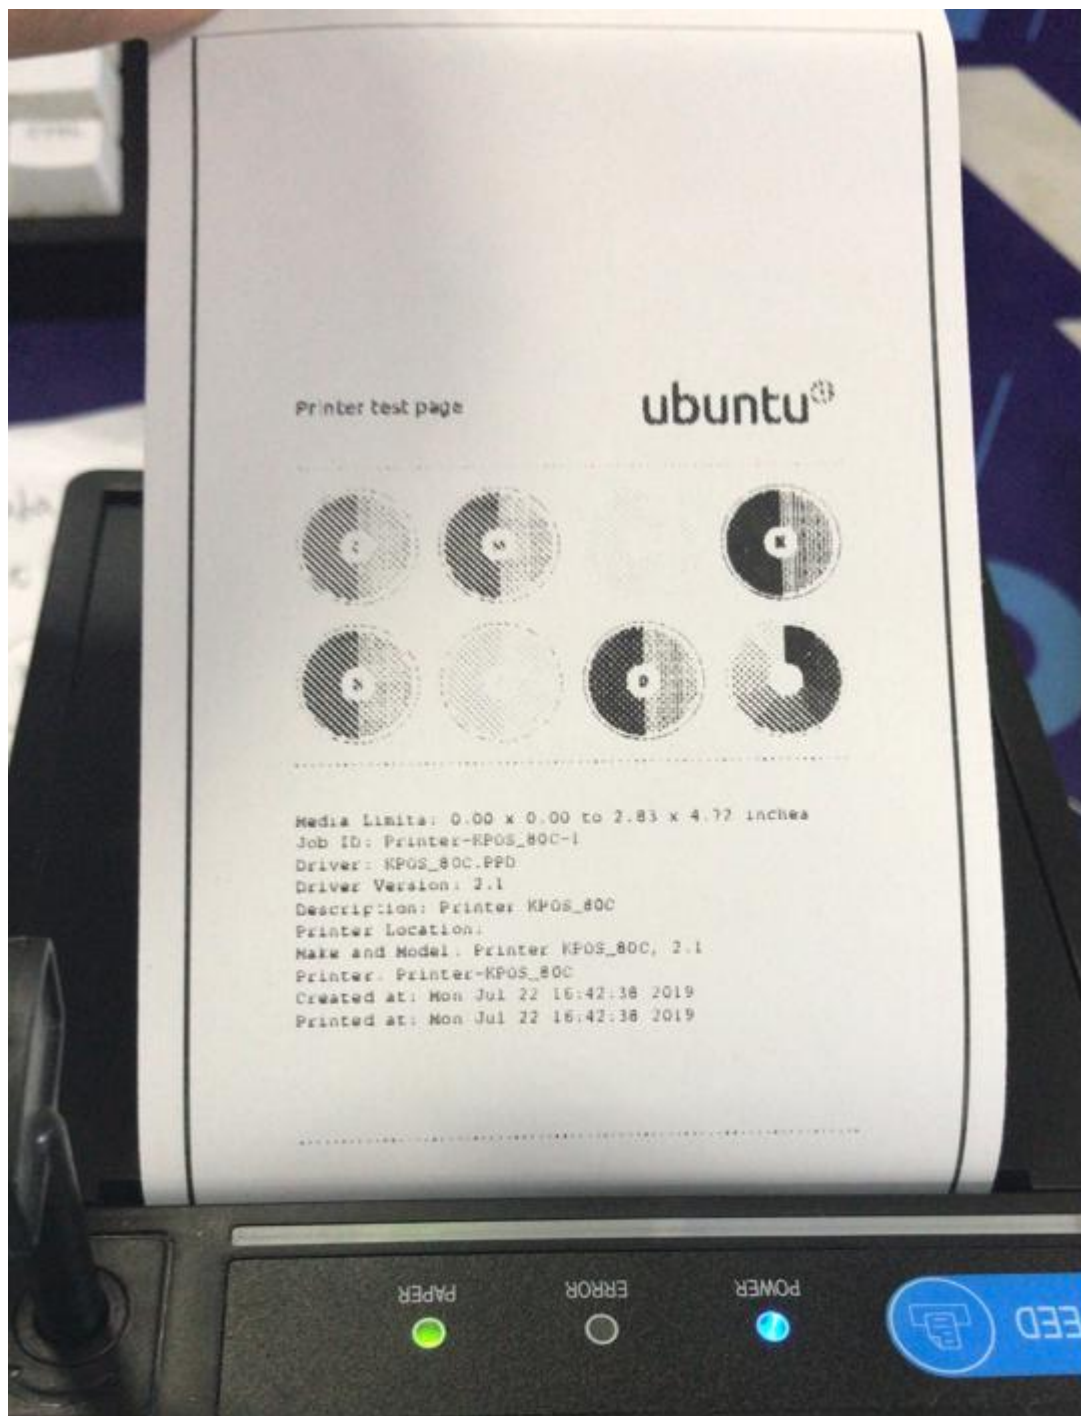

4.12 There are corresponding mode options in the printer which need to be turn on or turn off according to your needs.

**Printer Properties - 'Printer-KPOS\_80C' on localhost**

Settings  
Policies  
Access Control  
**Printer Options**  
Job Options  
Ink/Toner Levels

**General**

Media Size: 72mmx120mm ▼

Resolution: 203 DPI SystemGray ▼

Print Logo Before Page: Don't Print Logo ▼

Print Logo After Page: Don't Print Logo ▼

Buzzing Before Page: Don't Beep ▼

Buzzing After Page: Don't Beep ▼

Kick Drawer Before Job: Don't Kick Drawer ▼

Kick Drawer After Job: Don't Kick Drawer ▼

Feed Lines Before Page: 0 ▼

Feed Lines After Page: 0 ▼

Cut Paper Before Page: Don't Cut Paper ▼


Cut Paper After Page: Don't Cut Paper ▼

Cut Paper After Job: Feed And Half Cut Paper ▼


Apply Cancel OK

## 5, Installation method two:

5.1 Open the “device interface” and it’s “printer” option.

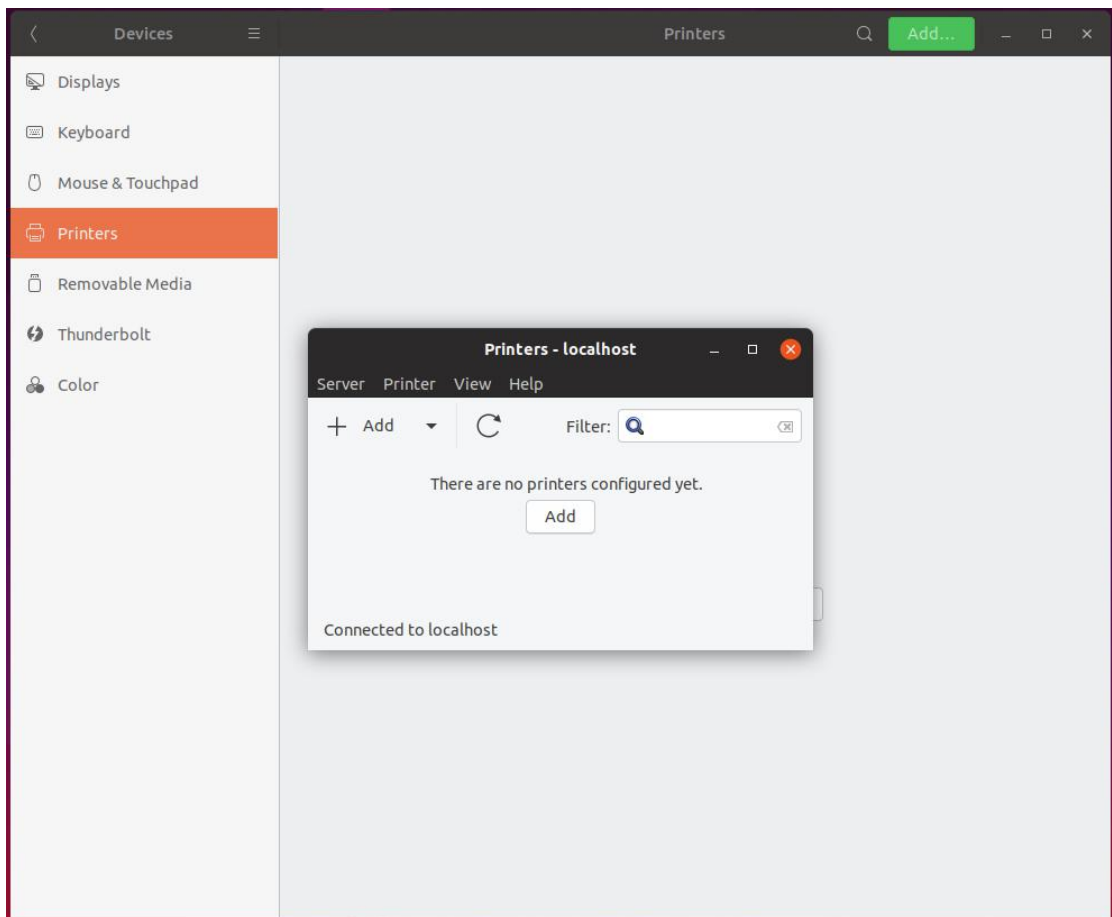


5.2 Click the “add the printer”, select the correct interface and set interface parameter, then click: next.

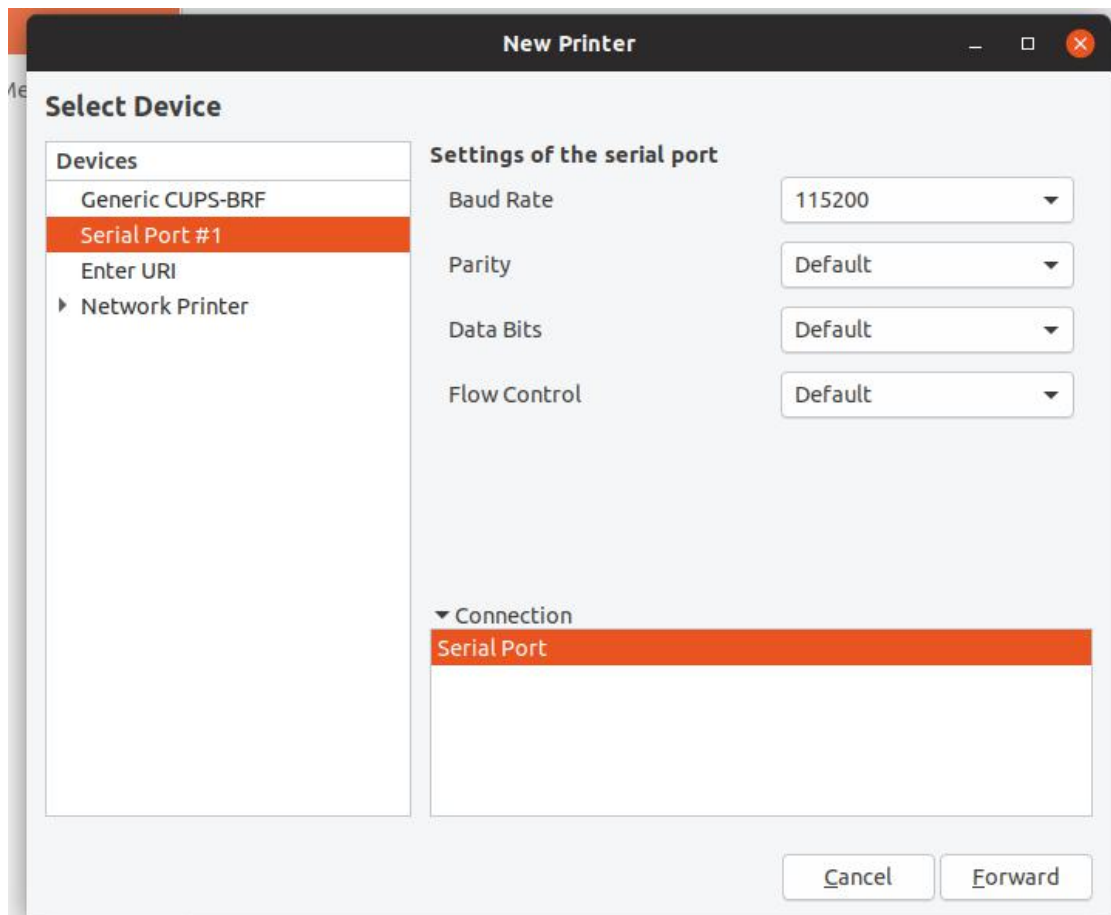

Note 1: If you printing from USB port, the printer must be connected to Linux first before execute installation. The identification process can take a few seconds to a dozen seconds, USB printing port mode is shown as: Unknown. USB virtual serial port is shown as: USB Serial Port, the parameters can be selected by default.

Note 2: If it doesn't enumerate the corresponding port, it's due to the insufficient interface permission, you need to open the limit rw of the corresponding interface right. Take the serial port 1 as example: `sudo chmod a+rw /dev/ttyS0`. You can enumerate again in a few minutes after change the permission.

5.3 Select the “PPD” mode to install, and choose the corresponding PPD file, then click: Next.

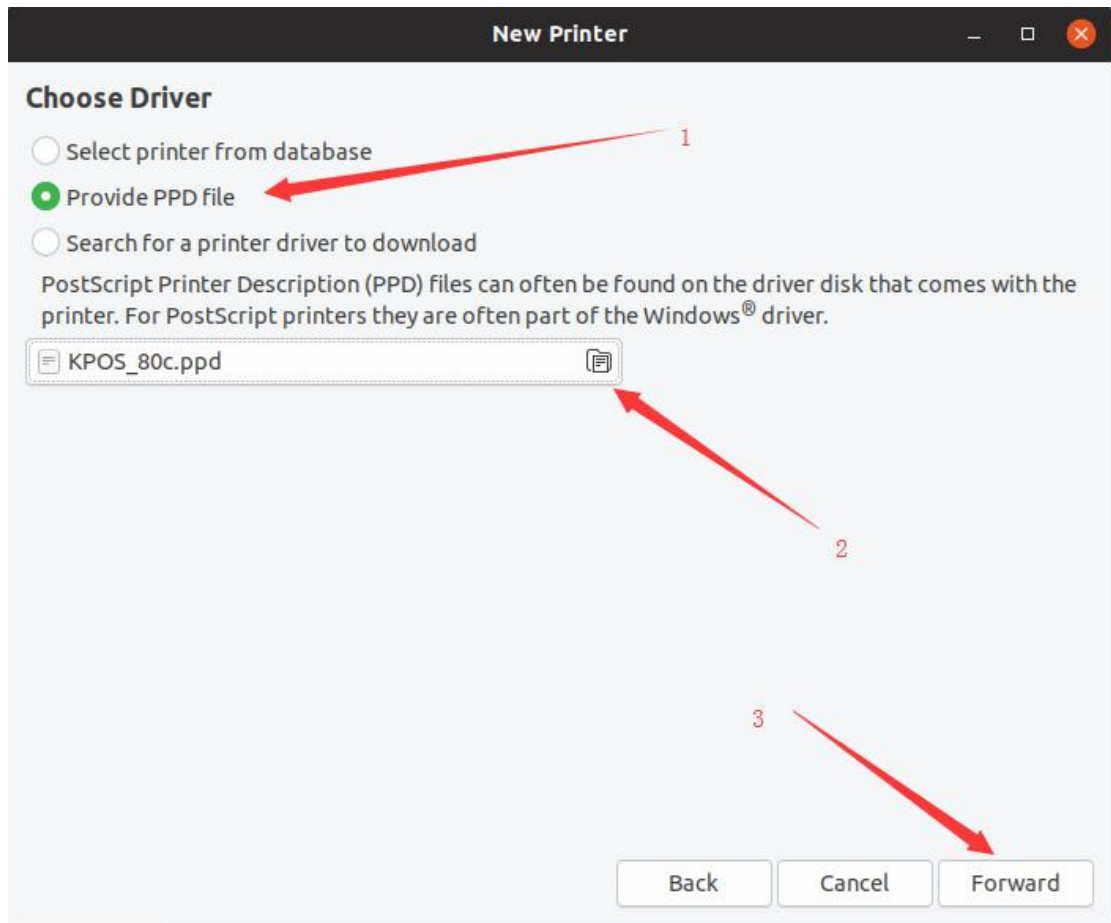

5.4 Setting printer name parameters then click: Apply.

**New Printer**

**Describe Printer**

**Printer Name**  
Short name for this printer such as "laserjet"

Printer-KPOS\_80C


**Description (optional)**  
Human-readable description such as "HP LaserJet with Duplexer"


Printer KPOS\_80C

**Location (optional)**  
Human-readable location such as "Lab 1"

Back Cancel Apply


5.5, Click button " print self-test page" to test if the communication is normal.

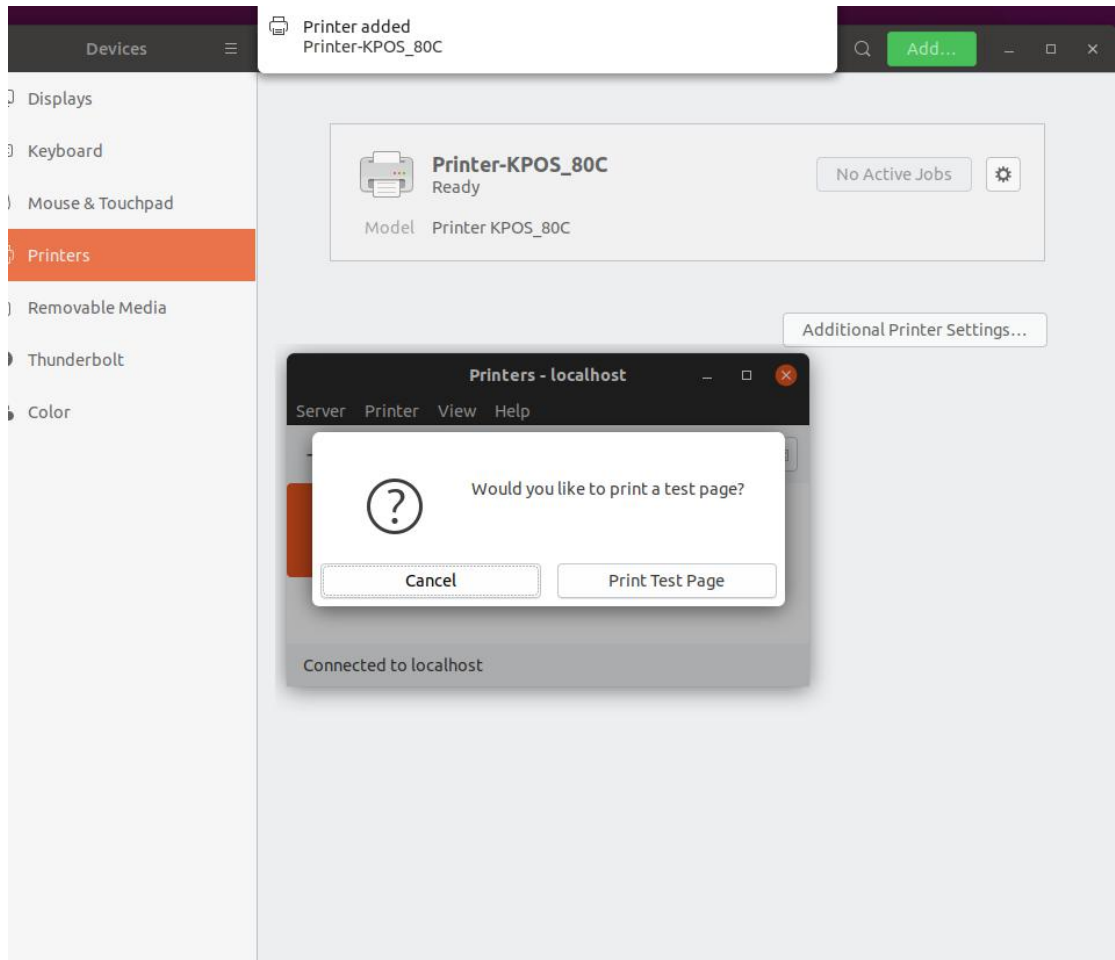

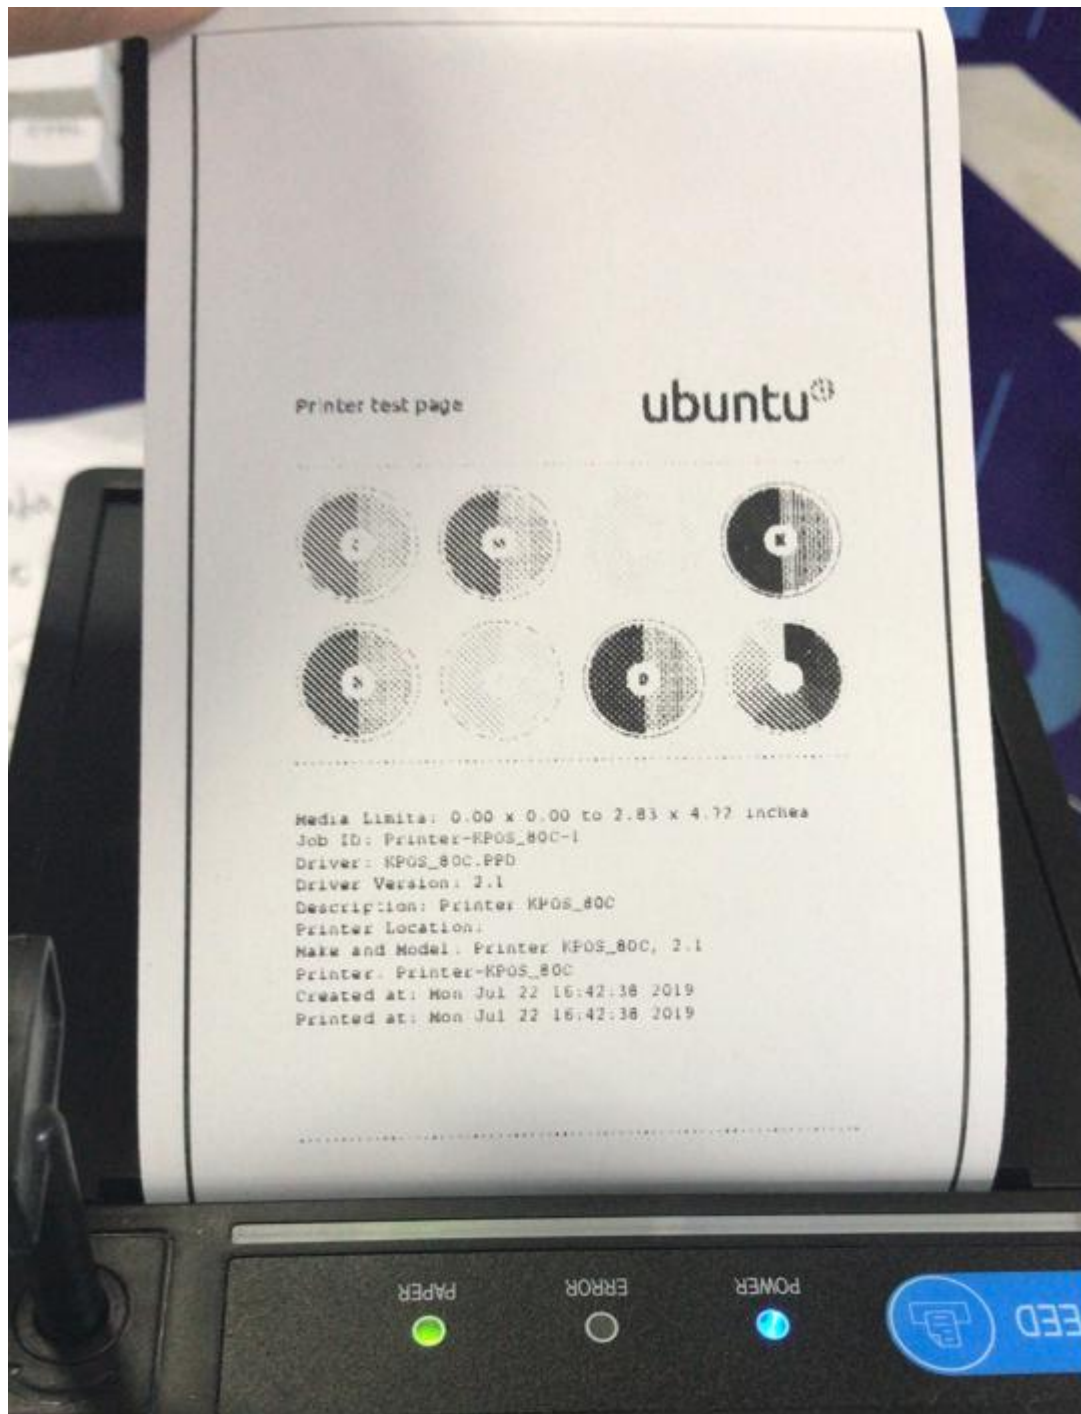

5.6, There is corresponding modes options of the printers, please turn on or turn off according to your needs.



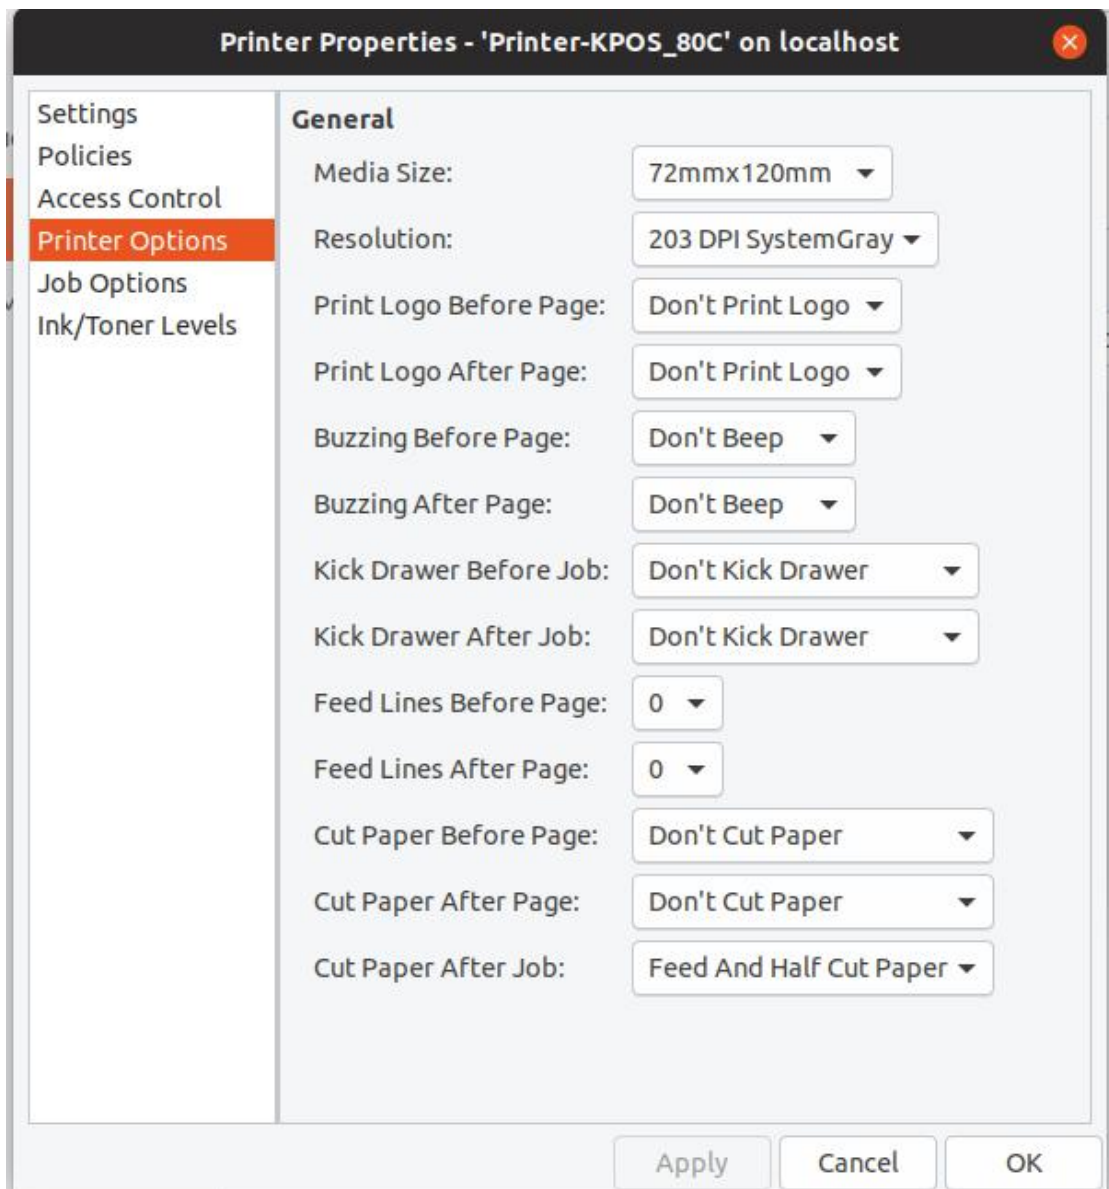

## 6, Instructions

6.1 The driver support printing from word, browser and image editor, andalso directly printing from shell, for example: `lp filename` (it must set the default printer),  
`lp -d [printrname] [filename]`(Specified printer print the specified file),  
`lp -o filename.bin`(print binary file), it can only print English content when you print from shell.

## 7, Parameter options.

7.1 Media Size: paper size, user can custom it or choose from the option list. If the

print range exceeded the printing limits, then the exceeding part won't be printed. In order to ensure the printing effect, we will not scale the print content.

7.2 Buzzing: Only works on machines with a buzzer.

7.3 Cut Paper: Only works on machines with a cutter.