


HS-24 Micro Panel Printer's User Manual

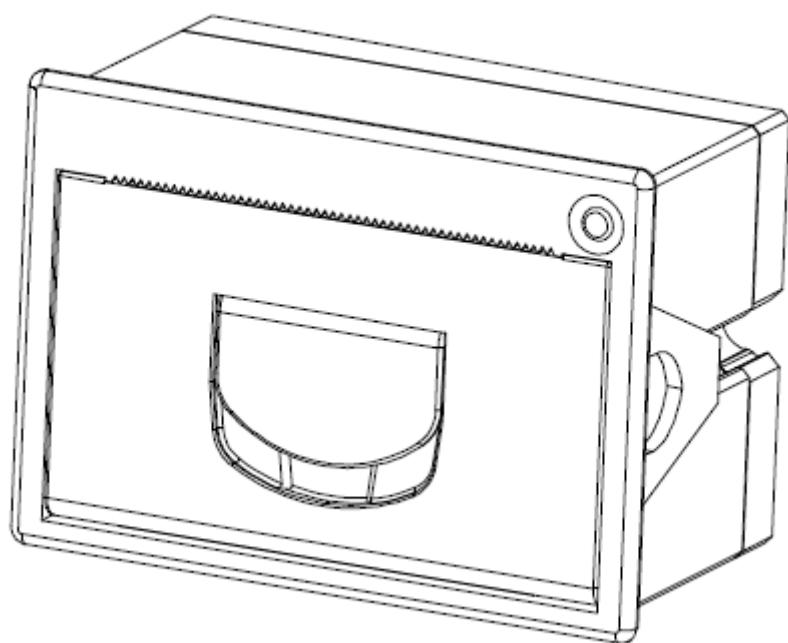

Version 1.03

Content

Cautions	4
1 Outline.....	5
1.1 General Specifications	5
1.2 Features	5
2 Printer outline pictures and dimension.....	6
2.1 Outline pictures.....	6
2.2 Dimension.....	6
3 How to use	7
3.1 Operation specifications.....	7
3.2 Printing test	8
4. Connectors	8
5 Define of the FPC cable for the prinrer mechanism (FPC 30PINs)	9
6 Using attention	10
7 SC/POS Printing Command Set.....	10
7.1 Command list	10
7.2 Control Command.....	12
GS (k pL pH cn fn n1 n2 (fn=65)	41
GS (k pL pH cn fn n (fn=67).....	42
GS (k pL pH cn fn n (fn=69).....	42
GS (k pL pH cn fn m d1...dk (fn=80)	42
GS (k pL pH cn fm m (fn=81).....	43
GS (k pL pH cn fn m (fn=82).....	43
8 Schedules.....	47
8.1 Character code table	47
Page0 PC437 Page3 CP860 [Portuguese]	47
Page 1 Katakana.....	48
Page2 PC850 [Multilingual]	48
Page3 PC860 [Portuguese]	49
Page4 PC863 [Canadian-French]	49
Page5 pc865[Nordic]	50
Page6 pc1251 [Cyrillic]	50
Page7 pc866 Cyrillic #2	51
Page8 MIK[Cyrillic /Bulgarian].....	51
Page9 CP755	52
Page10 Iran	52
Page15 CP862 [Hebrew]	53
Page 16 PC1252 Latin 1.....	53
Page 17 WCP1253 [Greek].	54
Page18 PC852.....	54
Page19 PC858 (Multilingual Latin I +Euro).....	55
Page20 Iran II	55
Page21 Latvian	56

Page22 CP864 [Arabic].....	56
Page23 ISO-8859-1 [West Europe].....	57
Page24 CP737 [Greek].....	57
Page25 WCP1257 [Baltic].....	58
Page26 Thai.....	59
Page27 CP720[Arabic]	59
Page28 CP855.....	60
Page29 PC857 [Turkish]	60
Page30 WCP1250 [Central Eurpoe]	61
Page31 CP775.....	61
Page32 WCP1254[Turkish]	62
Page33 WCP1255 [Hebrew].....	62
Page34 WCP1256[Arabic]	63
Page35 WCP1258 [Vietnam]	63
Page36 ISO-8859-2[Latin 2].....	64
Page37 ISO-8859-3[Latin 3].....	64
Page38 ISO-8859-4[Baltic]	64
Page39 ISO-8859-5[Cyrillic]	65
Page40 ISO-8859-6[Arabic]	65
Page41 ISO-8859-7[Greek]	66
Page42 ISO-8859-8[Hebrew].....	66
Page43 ISO-8859-9[Turkish]	67
Page44 ISO-8859-15 [Latin 3].....	67
Page45 Thai2	68
Page46 CP856 ()	68
Page47 Cp874.....	68
8.2 International character set	69
8. 3 QR Code Demo.....	69

Cautions

1. This document shall apply only to the product(s) identified herein.
2. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Hspos Technology Limited.
3. The contents of this document are subject to change without notice. Please contact us for the latest information.
4. While every precaution has been taken in the preparation of this document, Hspos Technology Limited assumes no responsibility for errors or omissions.
5. Neither is any liability assumed for damages resulting from the use of the information contained herein.
6. Hspos Technology Limited shall be not liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or failure to strictly comply with Hspos Technology Limited's operating and maintenance instructions.
7. Hspos Technology Limited shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Hspos Products or Hspos Approved Products by Hspos Technology Limited.

1 Outline

A4II embedded print module uses the mature printing mechanism and the commonly used MCU and devices, it has the following features:

- totally enclosed、paper easy loading structure; Rectangular plane plate design; ultra small volume; embedded depth is just 42 mm, but can accommodate 30 mm diameter paper roll. Fashion & fine appearance, light-weight, high printing speed、smoothly and clearly, can be easily integrated into customer system equipment.
- Built-in original imported printing machine, low voltage, low power design, widely used in medical, fire protection, electric power, weighing instruments, Banks, gas stations, GPS navigation and other industries.

1.1 General Specifications

	Printing Method	Thermal Dot Line
Print	Printing Speed	50-80mm/s
	Resolution	8 dots/mm, 384 dots/line
	Effective Printing Width	48mm
Character	Character Set	ASCII,GB2312-80(Chinese)
	Print Font	ANK:9X17,12X24, GBK:24×24
	Paper Type	Thermal paper
Paper Spec	Paper Width	57.5± 0.5mm
	Paper Thickness	0.06 to 0.07mm
	Paper Roll Diameter	Max: 30mm
Reliability	MCBF	5 million lines
Interface		RS232+USB/TTL+USB
Insert Depth		43mm
Power Supply (Adapter)		DC5V-9V or 12VDC
	Outline Dimension (WxDxH)	82x58x45 mm
Physical	Installation Port Size	77x 53mm
	Color	Beige/ Black
	Operating Temp	5°C ~ 50°C
Environment	Operating Humidity	10% ~ 80%
	Storage Temp	-20°C ~ 60°C
	Storage Humidity	10% ~ 90%

1.2 Features

- Thermal printing method
- Integrated printing mechanism and circuit, easily embedded to any kinds of instruments and meters

- Rich of graphics/curves/characters print function, and can print 24X24 GB2312 Chinese character and 12X24 standard ASCII, and enlarge Chinese font and characters 1-4 times to print.
- With a self-check function, through indicator light indicates current printer operation statement.
- Print speed: 50-80mm/s
- Operating voltage range width 5-9V/12V, average current is 3 A
- Operating temperature range: 0-50° C

2 Printer outline pictures and dimension


2.1 Outline pictures



- Outline dimension: 82x58x45 mm
- Front panel Size: 77.5x 53 mm
- Embedded depth: 43 mm
- Max diameter of paper roll: 30 mm

2.2 Dimension

Installation size as follows:

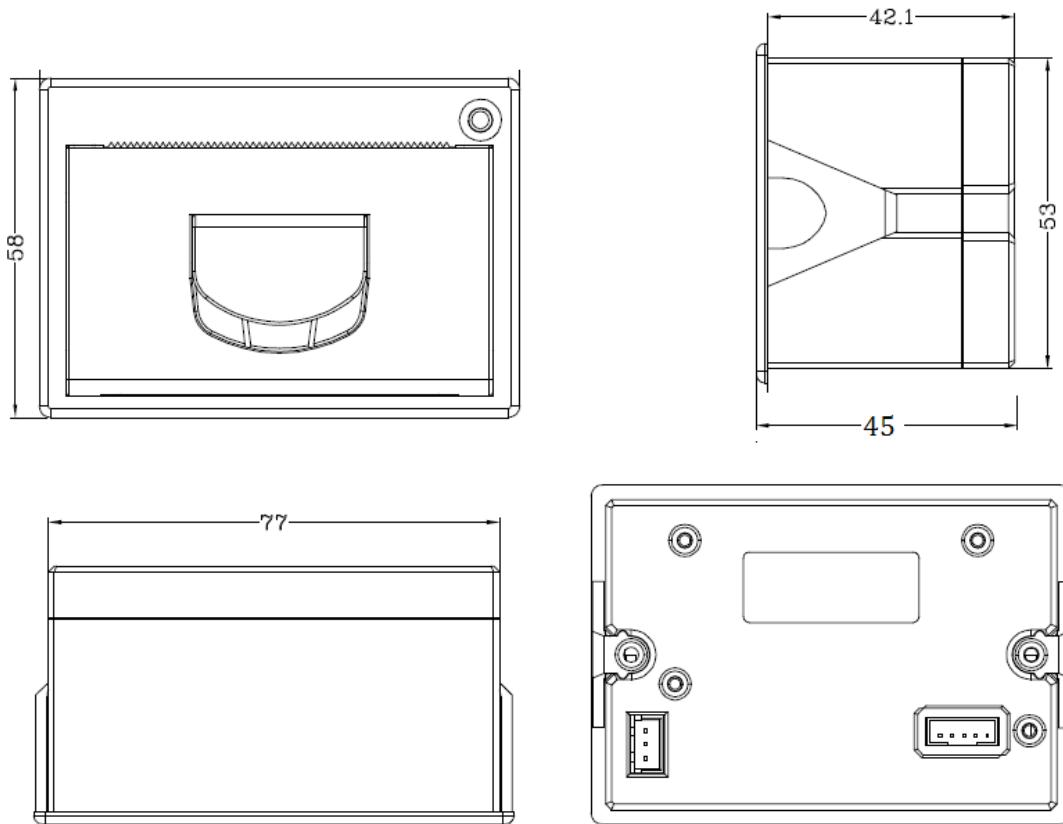

3 How to use

3.1 Operation specifications

A. the instruction of indicator light

Power on, the indicator light will flash 2 times, interval 1sec, it say the startness is OK, and then the instructions for the indicator light as below:

- Blink once: Work well (Stay lit for some customized board)
- Blink twice: Printer mechanism is ununited or temperature is too low.
- Blink three times: No paper is detected
- Blink four times: Cutter is wrong (Just for board with cutter)
- Blink five times: Printer mechanism is overheat
- Blink six times: Roller didn't press well. (Just for board with roller detection.)
- Blink ten times: Flash device is wrong for the board.

B. key instruction

- The key on the panel printer is FEED key

C. how to change new paper roller

- Before changing, turn up the switch, and put into the paper roller

3.2 Printing test

Power on, press the [feed] key, for a while, relax the key, it will print out one testing sample.

Power on, press key per time, it will feed the paper.

4. Connectors



Power supply definition (5-9v) :

Pin number	Signal name
1	NC
2	VH(5-9V)
3	GND

Power supply definition (12v):

Pin number	Signal name
1	VIN(+12V)
2	NC
3	GND

Serial port:

Pin number	Signal name
1	NC
2	TX(Tx, printer output)
3	RX(Rx, printer input)
4	DTR (printer output)
5	GND

PS: Serial port has TTL and RS232 as option.

USB Interface definition:

Pin number	Signal name
1	VBUS
2	D-
3	D+
4	NC
5	GND

5 Define of the FPC cable for the prinrer mechanism (FPC 30PINs)

Pin number	Signal name	Function
1	PHK	Cathode of photo interruptor
2	VSEN	Photo-sensor power
3	PHE	Emitter for photo interruptor
4	MT/B	Step motor excitation signal
5	MT/B ⁻	Step motor excitation signal
6	MT/A	Step motor excitation signal
7	MT/A ⁻	Step motor excitation signal
8	VH	Head driver power
9	VH	Head driver power
10	DI	Data input
11	CLK	Aynchronous clock for communication
12	GND	Ground power supply for thermal head
13	GND	Ground power supply for thermal head
14	STB6	Thermal head energizing control signal
15	STB5	Thermal head energizing control signal
16	STB4	Thermal head energizing control signal
17	VDD	Logic power
18	TM	Thermally sensitive resistor input terminal 1
19	TM	Thermally sensitive resistor input terminal 2
20	STB3	Thermal head energizing control signal
21	STB2	Thermal head energizing control signal
22	STB1	Thermal head energizing control signal
23	GND	Ground power supply for thermal head
24	GND	Ground power supply for thermal head
25	ILAT	Data Latch
26	DO	Data output
27	VH	Power supply for thermal head
28	VH	Power supply for thermal head
29	N.C(101)SW1(103)	Platen release switch
30	N.C(101)SW2(103)	Platen release switch

6 Using attention

6.1 Please notice, the ESD wrist ring and the humidity manufatures ETC, when using the printer, to protect the inner elctrontic parts of the printer from the damage of ESD, because the TPH of the Printer and photoelectric sensor are ESD Sensitive parts.

6.2 For protecting plastic shaft, don't smear any oil or others on the rubber parts.

6.3 Don't touch the TPH, TPH having the palm oil, will induce the usage of the printer.If any oil or others in the TPH, pls using an alcohol cotton stick clean the area between plastic shaft and printer head at once.PS,Don't strike the TPH.

6.4 Due to the printer is easy-paper structure,you need pick up the rubber stick only push the rubber stick.So,if the paper jam,push harder will cause the rubber stick gearwheel damaged.so pls don't push the paper harder, pls do open the cover and re-fill the paper

6.5 The temperature of the TPH protection must be below 65 °C , if you print continuously,Because the exterior of the temperature of the IC protection & motor can't not over 90°C to protect the motor thread ring.

6.6 Pls use the good quality paper, because the sensetive of the paper will infuence print effect, meanwhile, rough paper will incease the excessive wear to the printer head, and reduce the life of the printer.

7 SC/POS Printing Command Set

7.1 Command list

Type	Command	Name
Print Commands	<u>LF</u>	Print and line feed
	<u>CR</u>	Print and carriage return
	<u>HT</u>	Jump to the next TAB
	<u>ESC D n</u>	Set horizontal tab positions
	<u>ESC J n</u>	Print buffer data and Feed n dots paper
	<u>ESC d n</u>	Print buffer data and Feed n lines
	<u>ESC = n</u>	Set peripheral device
Format setup command	<u>ESC 2</u>	Set default line spacing to 32 dots
	<u>ESC 3 n</u>	Set line spacing to n dot line
	<u>ESC a n</u>	Select justification, left-aligned, right-aligned, center alignment
	<u>ESC SO</u>	Set Double Width mode
	<u>ESC DC4</u>	Cancel Double Width mode

	<u>GS L nL nH</u>	Set left margin
	<u>ESC \$ nL nH</u>	Set absolute print position
	<u>ESC B n</u>	Set Left Space
Character Setting Commands	ESC ! n	Set print mode(s)
	GS ! n	Set character size
	GS B	Turn white/black reverse printing mode on/off
	ESC V n	Turn 90°clockwise rotation mode on/off
	ESC v n	Transmit printer status to host
	ESC G n	Turn on/off double-strike mode
	ESC E n	Turn emphasized mode on/off
	ESC SP n	Set right-side character spacing
	ESC { n	Turn on/off upside-down printing mode
	ESC - n	Set the underline dots(0,1,2)
	ESC % n	Select/Cancel user-defined characters
	FS &	Select Kanji character mode
	FS .	Cancel Kanji character mode
	FS!	Set print mode for Kanji characters
	ESC &	Define user-defined characters
	ESC ? n	Cancel user-defined characters
	ESC R n	Select and international character set
	ESC t n	Select character code table
Bit Image Setting Commands	ESC *	Select bit-image mode
	GS *	Define downloaded bit image
	GS /	Print downloaded bit image
	GS v	打印指定宽度高度位图
	FS p n m	Print NV bitmap
	FS q n	Define NV bitmap
Init Commands	ESC @	Initialize printer
Status Commands	GS r n	Transmit status
	GS a n	Enable/Disable Automatic Status Back(ASB)
Barcode Setting Commands	GS H	Select HRI printing method
	GS h	Set bar code height
	GS w	Set bar code width
	GS k	Print bar code
	GS x	Set barcode printing left space
Qr code command	GS (k pL pH cn fn n1 n2 (fn=65)	Through n1 specify QR code pattern
	GS (k pL pH cn fn n (fn=67)	Set the QR code graphics module type
	GS (k pL pH cn fn n (fn=69)	Set the QR code error correction level error
	GS (k pL pH cn	Store received QR code data in 2 d barcode area

	fn m d1 ⋯ dk (fn=80)	
	GS (k pL pH cn fn m (fn=81)	Print received PDF417 data in 2 d barcode area
	GS (k pL pH cn fn m (fn=82)	Transmit QR codes graphic data information type in 2 d barcode area
Miscellaneous function commands	ESC 7 n1 n2 n3	Setting Control Parameter Command
	ESC 8 n1 n2	Select sleeping parameter
	ESC 9 n	Select Chinese code format
	DC2 T	Printing test page
	ESC c 5	Enable/disable panel buttons (For button)

7.2 Control Command

HT

[Name]	Horizontal tab	
[Format]	ASCII:	HT
	Decimal:	9
	Hexadecimal:	09
[Description]	Moves the print position to the next horizontal tab position.	
[Notes]	<ul style="list-style-type: none"> This command is ignored unless the next horizontal tab position has been set. If the next horizontal tab position exceeds the printing area, the printer sets the printing position to [printing area width+1]. Horizontal tab positions are set with ESC D. If this command is received when the printing position is at [printing area width+1], the printer executes print buffer-full printing of the current line and horizontal tab processing from the beginning of the next line. 	
[Reference]	ESC D	

LF

[Name]	Print and line feed	
[Format]	ASCII:	LF
	Decimal:	10
	Hexadecimal:	0A
[Description]	Prints the data in the print buffer and feeds one line, based on the current line spacing.	
[Note]	This command sets the print position to the beginning of the line.	
[Reference]	ESC 2, ESC 3	

CR

[Name]	Print and carriage return		
[Format]	ASCII:	CR	
	Decimal:	13	
	Hexadecimal:	0D	
[Description]	When automatic line feed is enabled, this command functions the same as LF ; when automatic line feed is disabled, this command is ignored.		
[Notes]	<ul style="list-style-type: none"> ● This command line feed is ignored with a serial interface model. ● Sets the print starting position to the beginning of the line. 		
[Reference]	LF		

ESC SP n

[Name]	Set right-side character spacing		
[Format]	ASCII:	ESC SP n	
	Decimal:	27 32 n	
	Hexadecimal:	1B 20 n	
[Range]	0≤n≤255		
[Description]	Sets the character spacing for the right side of the character to [n×0.125 mm].		
[Note]	<ul style="list-style-type: none"> ● The right-side character spacing for double-width mode is twice as the normal value. When characters are enlarged, the right-side character spacing is n times as normal value. ● This command does not affect the setting of Kanji characters ● This command sets values independently in standard mode. 		
[Default]	n=0		

ESC ! n

[Name]	Select print mode		
[Format]	ASCII:	ESC ! n	
	Decimal:	27 33 n	
	Hexadecimal:	1B 21 n	
[Range]	0≤n≤255		
[Description]	Selects print mode(s) using n as follows:		

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Character Font A (12×24).
	On	01	1	Character Font B (9×17).
1	Off	00	0	Turn white/black reverse printing mode off
	On	02	2	Turn white/black reverse printing mode on
2	Off	00	0	Turn upside-down printing mode off
	On	04	4	Turn upside-down printing mode on

3	Off	00	0	Relieve emphasized mode
	On	08	8	Set emphasized mode
4	Off	00	0	Relieve double-height mode
	On	10	16	Set double-height mode
5	Off	00	0	Relieve double-width mode
	On	20	32	Set double-width mode
6	Off	00	0	Turn Deleteline mode off
	On	40	64	Turn Deleteline mode on
7	-	-	-	Undefined.

ESC \$ nL nH

- [Name] Set absolute print positions
 [Format] ASCII: ESC \$ nL nH
 Decimal: 27 36 nL nH
 Hexadecimal: 1B 24 nL nH
 [Range] 0≤nL≤255
 0≤nH≤255
 [Description] Set the distance from the beginning of the line to the position at which subsequent are to be printed.
 The distance from the beginning of the line to the print position is[(nL+nH ×256)×0.125 mm]
 [Note]
 - Settings outside the specified printable area are ignored.
 - In standard mode, the horizontal motion unit (x) is used.
 [Reference] **ESC \, GS \$, GS **

ESC B n

- [Name] Set left blank char numbers
 [Format] ASCII: ESC B n
 Decimal: 27 66 n
 Hexadecimal: 1B 42 n
 [Range] Default is 0
 0 ≤ m ≤ 47

ESC % n

- [Name] Select/Cancel User-defined Characters
 [Format] ASCII: ESC % n
 Decimal: 27 37 n
 Hexadecimal: 1B 25 n
 [Range] 0≤n≤255


[Description]	Selects or cancels the user-defined character set.
	<ul style="list-style-type: none"> ● When the LSB of n is 0, the user-defined character set is canceled. ● When the LSB of n is 1, the user-defined character set is selected.
[Note]	<ul style="list-style-type: none"> ● When the user-defined character set is canceled, the built-in character set is automatically selected. ● n is available only for the least significant bit.
[Default]	n=0
[Reference]	ESC & , ESC ?

ESC & y c1 c2 [x1 d1...d(y×x1)]...[xk d1...d(y×xk)]

[Name]	Define user-defined characters
[Format]	ASCII: ESC & y c1 c2[x1 d1...d(y×x1)]...[xk d1...d(y×xk)] Decimal: 27 38 y c1 c2 [x1 d1...d(y×x1)]...[xk d1...d(y×xk)] Hexadecimal: 1B 26 y c1 c2 [x1 d1...d(y×x1)]...[xk d1...d(y×xk)]
[Range]	y=3 32≤c1≤c2≤126 0≤x≤12 (when Font A (12×24) is selected) 0≤d1 ... d(y×xk) ≤255
[Description]	Defines user-defined characters. <ul style="list-style-type: none"> ● y specifies the number of bytes in the vertical direction. ● c1 specifies the beginning character code for the definition, and c2 specifies the final code. ● x specifies the number of dots in the horizontal direction. ● The allowable character code range is from ASCII code <20>H to <7E>H (95 characters). ● It is possible to define multiple characters for consecutive character codes. If only one character is desired, use c1=c2. ● d is the dot data for the characters. The dot pattern is in the horizontal direction from the left side. Any remaining dots on the right side are blank. ● The data to define user-defined characters is (y×x) bytes. ● Set a corresponding bit to 1 to print a dot or 0 not to print a dot. ● This command can define different user-defined character patterns for each font. To select a font, use ESC ! ● User-defined characters and a downloaded bit image cannot be defined simultaneously. When this command is executed, the downloaded bit image is cleared. ● The user-defined character definition is cleared when: <ol style="list-style-type: none"> 1) ESC @ is executed. 2) GS * is executed. 3) ESC ? is executed. 4) Reset the printer or shut off the power.
[Default]	The internal character set

[Reference] **ESC %, ESC ?**

[Example] When Font A (12×24) is selected.

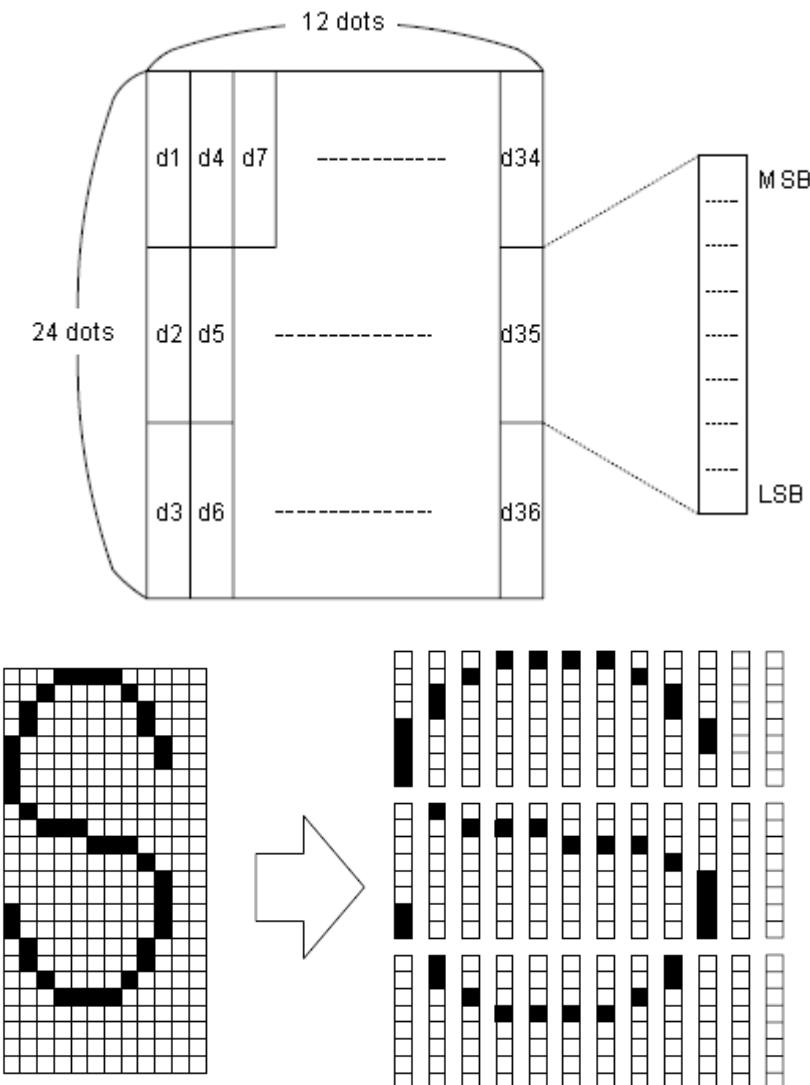

d1=<0F>H d4=<30>H d7=<40>H . . .
d2=<03>H d5=<80>H d8=<40>H . . .
d3=<00>H d6=<00>H d9=<20>H . . .

ESC * m nL nH d1...dk

[Name] Select bit-image mode

[Format] ASCII: ESC * m nL nH d1 ... dk

Decimal:

27 42 m nL nH d1 ... dk

Hexadecimal:

1B 2A m nL nH d1 ... dk

[Range] m =0,1,32,33

nL=0-255

nH=0-3

d=0-255

[Description] Selects a bit-image mode using m for the number of dots specified by nL

and nH, as follows:

m	Mode	Vertical Direction		Horizontal Direction	
		Number of Dots	Dot Density	Dot Density	Number of Data (K)
0	8-dot single-density	8	67.7 dpi	101.6 dpi	$nL+nH \times 256$
1	8-dot double-density	8	67.7 dpi	203.2 dpi	$nL+nH \times 256$
32	24-dot single-density	24	203.2 dpi	101.6 dpi	$(nL+nH \times 256) \times 3$
33	24-dot double-density	24	203.2 dpi	203.2 dpi	$(nL+nH \times 256) \times 3$

[Note]

- If the value of m is out of the specified range, nL and nH the data following are processed as normal data.
- The nL and nH indicate the number of dots in the bit image in the horizontal direction. The number of dots is calculated by $nL+nH \times 256$.
- If the bit-image data input exceeds the number of dots to be printed on a line, the excess data is ignored.
- d indicates the bit-image data. Set a corresponding bit to 1 to print a dot or to 0 not to print a dot.
- After printing a bit image, the printer returns to normal data processing mode.
- This command is not affected by print modes (emphasized, double-strike, underline, character size, or white/black reverse printing), except upside-down printing mode.
- The relationship between the image data and the dots to be printed is described in Figure 3.11.3.
- When 8-dot bit image is selected:

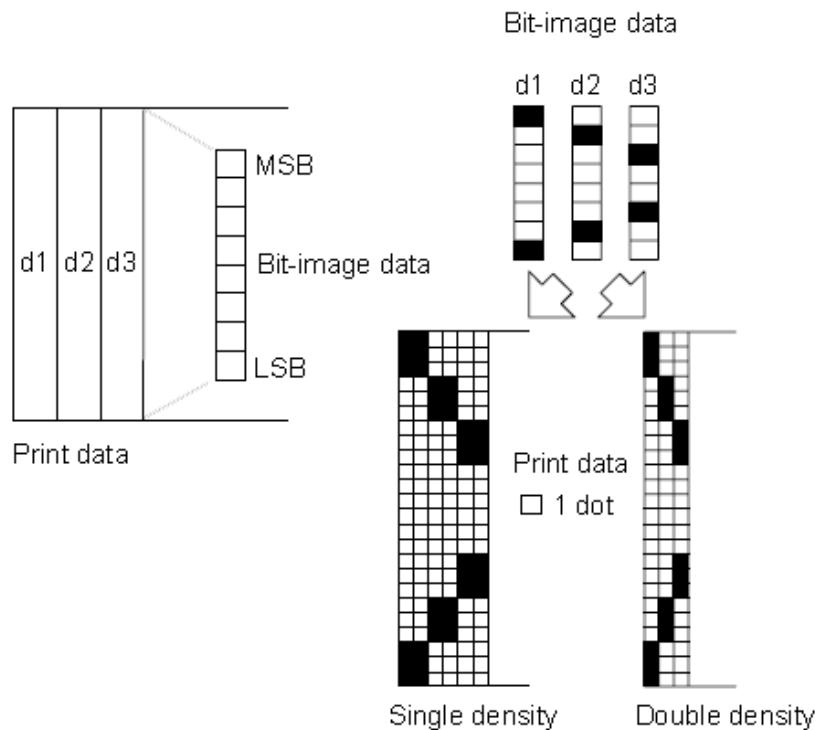


Figure 3.11.3.

- When 24-dot bit image is selected:

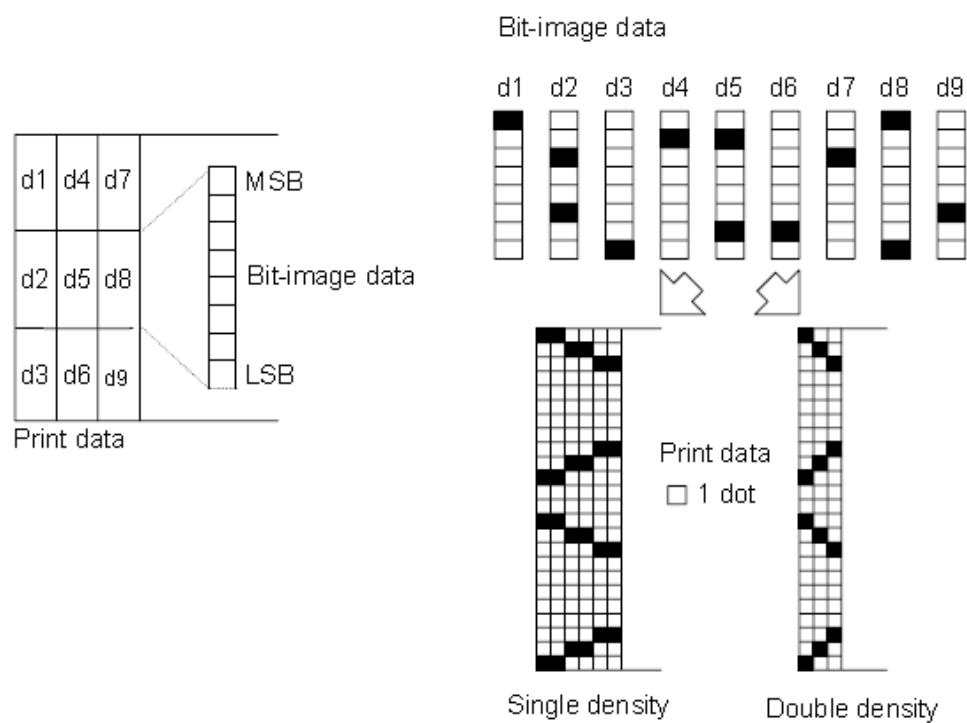


Figure 3.11.3.

ESC - n

[Name] Turn underline mode on/off

[Format] ASCII: ESC - n

Decimal: 27 45 n

Hexadecimal: 1B 2D n

[Range] 0≤n≤2, 48≤n≤50

[Description] Turns underline mode on or off, based on the following values n:

n	Function
0, 48	Turns off underline mode
1, 49	Turns on underline mode (1 dot thick)
2, 50	Turns on underline mode (2 dots thick)

- [Note]
- The printer can underline all characters (including right-side character spacing), but cannot underline the space set by **HT**.
 - The printer cannot underline 90° clockwise rotated characters and white/black inverted characters.
 - When underline mode is turned off by setting the value of n to 0 or 48, the following data is not underlined, and the underline thickness set before the mode is turned off does not change. The default underline thickness is 1 dot.
 - Changing the character size does not affect the current underline thickness.
 - Underline mode can also be turned on or off by using **ESC !**. Note, however, that the last received command is effective.

[Default] n = 0

[Reference] **ESC !**

ESC 2

[Name] Select default line spacing

[Format] ASCII: ESC 2

Decimal: 27 50

Hexadecimal: 1B 32

[Description] Selects 3.75 mm (30×0.125 mm) line spacing.

[Note] The line spacing can be set independently in standard mode.

[Reference] **ESC 3 n**

ESC 3 n

[Name] Set line spacing

[Format] ASCII: ESC 3 n

Decimal: 27 51 n

Hexadecimal: 1B 33 n

[Range]	0≤n≤255
[Description]	Sets the line spacing to [n×0.125 mm].
[Note]	<ul style="list-style-type: none"> ● The line spacing can be set independently in standard mode. ● In standard mode, the vertical motion unit (y) is used.
[Default]	n=30
[Reference]	ESC 2

ESC? n

[Name]	Cancel user-defined characters
[Format]	ASCII: ESC ? n Decimal: 27 37 n Hexadecimal: 1B 3F n
[Range]	32≤n≤126
[Description]	Cancels user-defined characters.
[Note]	<ul style="list-style-type: none"> ● This command cancels the patterns defined for the character codes specified by n. After the user-defined characters are canceled, the corresponding patterns for the internal characters are printed. ● This command deletes the pattern defined for the specified code in the font selected by ESC !. ● If user-defined characters have not been defined, the printer ignores this command.
[Reference]	ESC &, ESC %

ESC @

[Name]	Initialize the printer
[Format]	ASCII: ESC @ Decimal: 27 64 Hexadecimal: 1B 40
[Description]	Initializes the printer.
[Note]	<ul style="list-style-type: none"> ● The print buffer is cleared. ● Reset the parametric to default value. ● return to standard mode ● Delete user-defined characters ● The DIP switch settings are not checked again. ● The data in the receive buffer is not cleared.

ESC D n1...nk NUL

[Name]	Set horizontal tab positions
[Format]	ASCII: ESC D n1...nk NUL Decimal: 27 68 n1...nk 00 Hexadecimal: 1B 44 n1...nk 00

[Range]	$1 \leq n \leq 255$ $0 \leq k \leq 32$
[Description]	Set horizontal tab positions.
[Note]	<ul style="list-style-type: none"> ● n specifies the column number for setting a horizontal tab position from the beginning of the line. ● k indicates the total number of horizontal tab positions to be set. ● The horizontal tab position is stored as a value of [character width×n] measured from the beginning of the line. The character width includes the right-side character spacing, and double-width characters are set with twice the width of normal characters. ● This command cancels the previous horizontal tab settings. ● When setting n = 8, the print position is moved to column 9 by sending HT. ● Up to 32 tab positions (k=32) can be set. Data exceeding 32 tab positions is processed as normal data. ● Transmit [n]k in ascending order and place a NUL code 0 at the end. ● When [n]k is less than or equal to the preceding value [n]k-1, tab setting is finished and the following data is processed as normal data. ● ESC D NUL cancels all horizontal tab positions. ● The previously specified horizontal tab positions do not change, even if the character width changes. ● The character width is memorized for each standard mode.
[Default]	The default tab positions are at intervals of 8 characters (columns 9, 17, 25...) for Font A (12×24).
[Reference]	HT

ESC E n

[Name]	Turn emphasized mode on/off
[Format]	ASCII: ESC E n
	Decimal: 27 69 n
	Hexadecimal: 1B 45 n
[Range]	$0 \leq n \leq 255$
[Description]	Turns emphasized mode on or off <ul style="list-style-type: none"> ● When the LSB of n is 0, emphasized mode is turned off. ● When the LSB of n is 1, emphasized mode is turned on. ● Only the least significant bit of n is enabled. ● This command and ESC ! turn on and off emphasized mode in the same way. Be careful when this command is used with ESC !
[Note]	
[Default]	n=0
[Reference]	ESC !

ESC G n

[Name]	Turn on/off double-strike mode		
[Format]	ASCII:	ESC G	n
	Decimal:	27	71 n
	Hexadecimal:	1B	47 n
[Range]	0≤n≤255		
[Description]	Turns double-strike mode on or off.		
	<ul style="list-style-type: none"> ● When the LSB of n is 0, double-strike mode is turned off. ● When the LSB of n is 1, double-strike mode is turned on. 		
[Note]	<ul style="list-style-type: none"> ● Only the lowest bit of n is enabled. ● Printer output is the same in double-strike mode and in emphasized mode. 		
[Default]	n=0		
[Reference]	ESC E n		

ESC J n

[Name]	Print and feed paper		
[Format]	ASCII:	ESC	J n
	Decimal:	27	74 n
	Hexadecimal:	1B	4A n
[Range]	0≤n≤255		
[Description]	Prints the data in the print buffer and feeds the paper [n×0.125 mm (0.0049")].		
[Notes]	<ul style="list-style-type: none"> ● After printing is completed, this command sets the print starting position to the beginning of the line. ● The paper feed amount set by this command does not affect the values set by ESC 2 or ESC 3. ● In standard mode, the printer uses the vertical motion unit (y). 		

ESC R n

[Name]	Select an internal character set		
[Format]	ASCII:	ESC R	n
	Decimal:	27	82 n
	Hexadecimal:	1B	52 n
[Range]	0≤n≤13		
[Description]	Select an internal character set n as follows:		

n	Character set	n	Character set
0	U.S.A	8	Japan
1	France	9	Norway
2	Germany	10	Denmark II

3	U.K	11	Spain II
4	Denmark I	12	Latin America
5	Sweden	13	Korea
6	Italy	14	Slovenia/Croatia
7	Spain I	15	China

[Default] n=0

ESC V n

[Name] Turn 90° clockwise rotation mode on/off

[Format] ASCII: ESC V n

Decimal: 27 86 n

Hexadecimal: 1B 56 n

[Range] 0≤n≤1, 48≤n≤49

[Description] Turns 90° clockwise rotation mode on/off.

n is used as follows:

n	Function
0,48	Turns off 90° clockwise rotation mode
1,49	Turns on 90° clockwise rotation mode

- [Note]
- This command affects printing in standard mode. However, the setting is always effective.
 - When underline mode is turned on, the printer does not underline 90° clockwise-rotated characters.
 - Double-width and double-height commands in 90° rotation mode enlarge characters in the opposite directions from double-height and double-width commands in normal mode.

[Default] n=0

[Reference] **ESC !, ESC**

ESC v n

[Name] Transmit printer status to the host.

[Format] ASCII: ESC v n

Decimal: 27 118 n

Hexadecimal: 1B 76 n

[Range] 0≤n≤1, 48≤n≤49

[Description] The return value is 1 bytes,It is a different on behalf of the status:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Mechanism not connected.
	On	01	1	Mechanism connected.
1	-	-	-	Undefined.
2	Off	00	0	Paper has.
	On	04	4	Paper out.

3	Off	00	0	Voltage is normal.
	On	08	8	Voltage > 9.5V.
4	-	-	-	Undefined.
5	-	-	-	Undefined.
6	Off	00	0	Temperature is normal.
	On	40	64	Temperature > 60°.
7	-	-	-	Undefined.

For example: return "0x04" means paper out.

ESC a n

[Name] Select justification

[Format] ASCII: ESC a n

Decimal: 27 97 n

Hexadecimal: 1B 61 n

[Range] 0≤n≤2, 48≤n≤50

[Description] Aligns all the data in one line to the specified position.

n selects the justification as follows:

n	Justification
0,48	Left justification
1, 49	Centering
2, 50	Right justification

- [Note]
- The command is enabled only when processed at the beginning of the line in standard mode.
 - This command executes justification in the printing area.
 - This command justifies the space area according to HT, ESC \$.

[Default] n=0

[Example]

Left justification	Centering	Right justification
ABC ABCD ABCDE	ABC ABCD ABCDE	ABC ABCD ABCDE

ESC SO n

[Name] Select Double Width mode

[Format] ASCII: ESC SO n

Decimal: 27 14 n

Hexadecimal: 1B 0E n

[Description] Select Double Width mode

To turn double width off, use LF or DC4 command.

ESC DC4 n

[Name] Disable Double Width mode
 [Format] ASCII: ESC DC4 n
 Decimal: 27 20 n
 Hexadecimal: 1B 14 n
 [Description] Disable Double Width mode

ESC d n

[Name] Print and feed n lines
 [Format] ASCII: ESC d n
 Decimal: 27 100 n
 Hexadecimal: 1B 64 n
 [Range] 0≤n≤255
 [Description] Print the data in the buffer and feed paper n lines.
 [Notes]

- This command sets the print starting position to the beginning of the line.
- This command does not affect the line spacing set by **ESC 2** or **ESC 3**.
- The maximum paper feed amount is 1016 mm (40 inches). If the paper feed amount (n×line spacing) of more than 1016 mm (40 inches) is specified, the printer feeds the paper only 1016 mm (40 inches).

 [Reference] **ESC 2**, **ESC 3**

ESC t n

[Name] Select character code table
 [Format] ASCII: ESC t n
 Decimal: 27 116 n
 Hexadecimal: 1B 74 n
 [Range] 0≤n≤5, 16≤n≤19, n=255
 [Description] Select page n from the character code table as follows:

N	Code Page	N	Code Page
0	CP437 [U.S.A., Standard Europe]	24	CP737 [Greek]
1	Katakana	25	WCP1257 [Baltic]
2	CP850 [Multilingual]	26	Thai
3	CP860 [Portuguese]	27	CP720[Arabic]
4	CP863 [Canadian-French]	28	CP855
5	CP865 [Nordic]	29	CP857[Turkish]
6	WCP1251 [Cyrillic]	30	WCP1250[Central Europe]
7	CP866 Cyrillic #2	31	CP775

8	MIK [Cyrillic /Bulgarian]	32	WCP1254[Turkish]
9	CP755 [East Europe, Latvian 2]	33	WCP1255[Hebrew]
10	Iran	34	WCP1256[Arabic]
11	reserve	35	WCP1258[Vietnam]
12	reserve	36	ISO-8859-2[Latin 2]
13	reserve	37	ISO-8859-3[Latin 3]
14	reserve	38	ISO-8859-4[Baltic]
15	CP862 [Hebrew]	39	ISO-8859-5[Cyrillic]
16	WCP1252 Latin I	40	ISO-8859-6[Arabic]
17	WCP1253 [Greek]	41	ISO-8859-7[Greek]
18	CP852 [Latina 2]	42	ISO-8859-8[Hebrew]
19	CP858 Multilingual Latin I +Euro)	43	ISO-8859-9[Turkish]
20	Iran II	44	ISO-8859-15 [Latin 3]
21	Latvian	45	Thai2
22	CP864 [Arabic]	46	CP856
23	ISO-8859-1 [West Europe]	47	Cp874

[Default] n=0

[Reference] Character Code Tables

ESC { n

[Name] Turns on/off upside-down printing mode

[Format] ASCII: ESC { n

Decimal: 27 123 n

Hexadecimal: 1B 7B n

[Range] 0≤n≤255

[Description] Turns upside-down printing mode on or off.


- When the LSB of n is 0, upside-down printing mode is turned off.
- When the LSB of n is 1, upside-down printing mode is turned on.

[Note] Only the lowest bit of n is valid.

- This command is enabled only when processed at the beginning of a line in standard mode.
- In upside-down printing mode, the printer rotates the line to be printed by 180° and then prints it.

[Default] n=0

[Example]

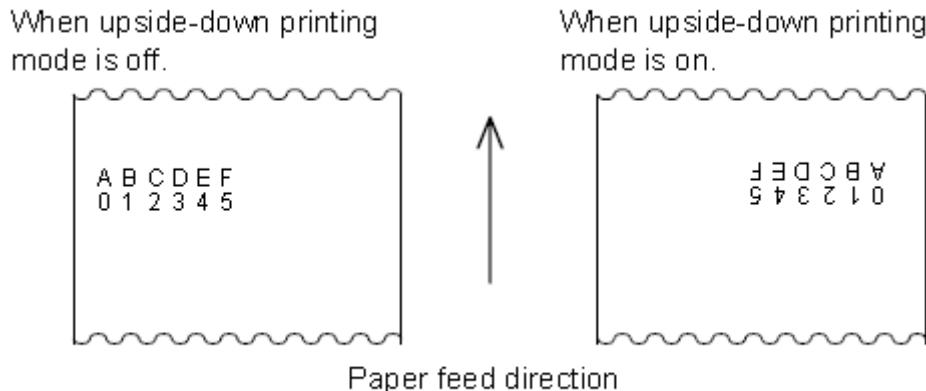

FS p n m

[Name] Print NV bit image

[Format]	ASCII:	FS	p	n	m
	Decimal:	28	112	n	m
	Hexadecimal:	1C	70	n	m

[Range] $1 \leq n \leq 255$

$0 \leq m \leq 3$, $48 \leq m \leq 51$

[Description] Prints NV bit image n using the mode specified by m.

m	Mode	Vertical Dot Density	Horizontal Dot Density
0, 48	Normal	203.2 dpi	203.2 dpi
1, 49	Double-width	203.2 dpi	101.6 dpi
2, 50	Double-height	101.6 dpi	203.2 dpi
3, 51	Quadruple	101.6 dpi	101.6 dpi

- n is the number of the NV bit image (defined using the **FS q** command).
- m specifies the bit image mode.

- [Details]
- NV bit image is a bit image defined in non-volatile memory by **FS q** and printed by **FS p**.
 - This command is not effective when the specified NV bit image has not been defined.
 - In standard mode, this command is effective only when there is no data in the print buffer.
 - This command is not affected by print modes (emphasized, underline, character size, white/black reverse printing, or 90° rotated characters, etc.), except upside-down printing mode.
 - If the downloaded bit-image to be printed exceeds one line, the excess data is not printed.
 - This command feeds dots (for the height n of the NV bit image) in normal and double-width modes and (for the height $n \times 2$ of the NV bit image) in doubleheight and quadruple modes, regardless of the line

spacing specified by **ESC 2** or **ESC 3**.

- After printing the bit image, this command sets the print position to the beginning of the line and processes the data that follows as normal data.

[Reference] **ESC *, FS q, GS /, GS v**

FS q n [xL xH yL yH d1...dk]1...[xL xH yL yH d1...dk]n


[Name]	Define NV bit image
[Format]	ASCII: FS q n [xL xH yL yH d1...dk]1...[xL xH yL yH d1...dk]n Decimal: 28 113 n [xL xH yL yH d1...dk]1...[xL xH yL yH d1...dk]n Hexadecimal: 1C 71 n [xL xH yL yH d1...dk]1...[xL xH yL yH d1...dk]n
[Range]	1≤n≤255 1≤xL≤255 1≤xH≤3 (when 1≤(xL+xH×256)≤1023) 1≤yL≤255 1≤yH≤1 (when 1≤(yL+yH×256)≤288) 1≤d≤255 $k=(xL+xH\times 256)\times(yL+yH\times 256)\times 8$ Total defined data area=192K bytes.
[Description]	Define the NV bit image specified by n. <ul style="list-style-type: none"> ● n specifies the number of the defined NV bit image. ● xL, xH specifies $(xL+xH\times 256)\times 8$ dots in the horizontal direction for the NV bit image you are defining. ● yL, yH specifies $(yL+yH\times 256)\times 8$ dots in the vertical direction for the NV bit image you are defining.
[Note]	<ul style="list-style-type: none"> ● Frequent write command executions may damage the NV memory. ● Therefore, it is recommended to write the NV memory 10 times or less a day. ● The printer performs a hardware reset after the procedure to place the image into the NV memory. Therefore, user-defined characters, downloaded bit images should be defined only after completing this command. The printer clears the receiver and print buffers and resets the mode to the mode that was in effect at power on. (this version is not support hardware reset). ● This command cancels all NV bit images that have already been defined by this command. ● From the beginning of the processing of this command till the finish of hardware reset, mechanical operations (including initializing the position of the print head when the cover is open, paper feeding using the FEED button, etc.) cannot be performed.

- During processing of this command, the printer is BUSY when writing data to the user NV memory and stops receiving data. Therefore it is prohibited to transmit the data, including real-time commands, during the execution of this command.
- NV bit image is a bit image defined in non-volatile memory by **FS q** and printed by **FS p**.
- In standard mode, this command is effective only when processed at the beginning of the line.
- This command is effective when 7 bytes<FS yH> of the command are processed normally.
- When the amount of data exceeds the capacity left in the range defined by xL, xH, yL, yH, the printer processes xL, xH, yL, yH out of the defined range.
- In the first group of NV bit images, when any of the parameters xL, xH, yL, yH is out of the definition range, this command is disabled.
- In groups of NV bit images other than the first one, when the printer encounters xL, xH, yL, yH out of the defined range, it stops processing this command and starts writing into the NV images. At this time, NV bit images that haven't been defined are disabled (undefined), but any NV bit images before that are enabled.
- The d indicates the definition data. In data (d) a 1 bit specifies a dot to be printed and a 0 bit specifies a dot not to be printed.
- This command defines n as the number of a NV bit image. Numbers rise in order from NV bit image 01H. Therefore, the first data group [xL xH yL yH d1...dk] is NV bit image 01H, and the last data group [xL xH yL yH d1...dk] is NV bit image n. The total agrees with the number of NV bit images specified by the command **FS p**.
- The definition data for an NV bit image consists of [xL xH yL yH d1...dk]. Therefore, when only one NV bit image is defined n=1, the printer processes a data group [xL xH yL yH d1...dk] once. The printer uses ([data: $(xL+xH\times 256)\times(yL+yH\times 256)\times 8$] + [header: 4]) bytes of NV memory.
- The definition area in this printer is a maximum of 192K bytes. This command can define several NV bit images, but cannot define bit image data whose total capacity [bit image data+header] exceeds 192K bytes.
- The printer does not transmit ASB status or perform status detection during processing of this command even when ASB is specified.
- Once an NV bit image is defined, it is not erased by performing **ESC @**, reset and power off.
- This command performs only definition of an NV bit image and does not perform printing. Printing of the NV bit image is performed by the **FS p** command.

[Reference]

FS p

[Example] 当 $xL=64, xH=0, yL=96, yH=0$

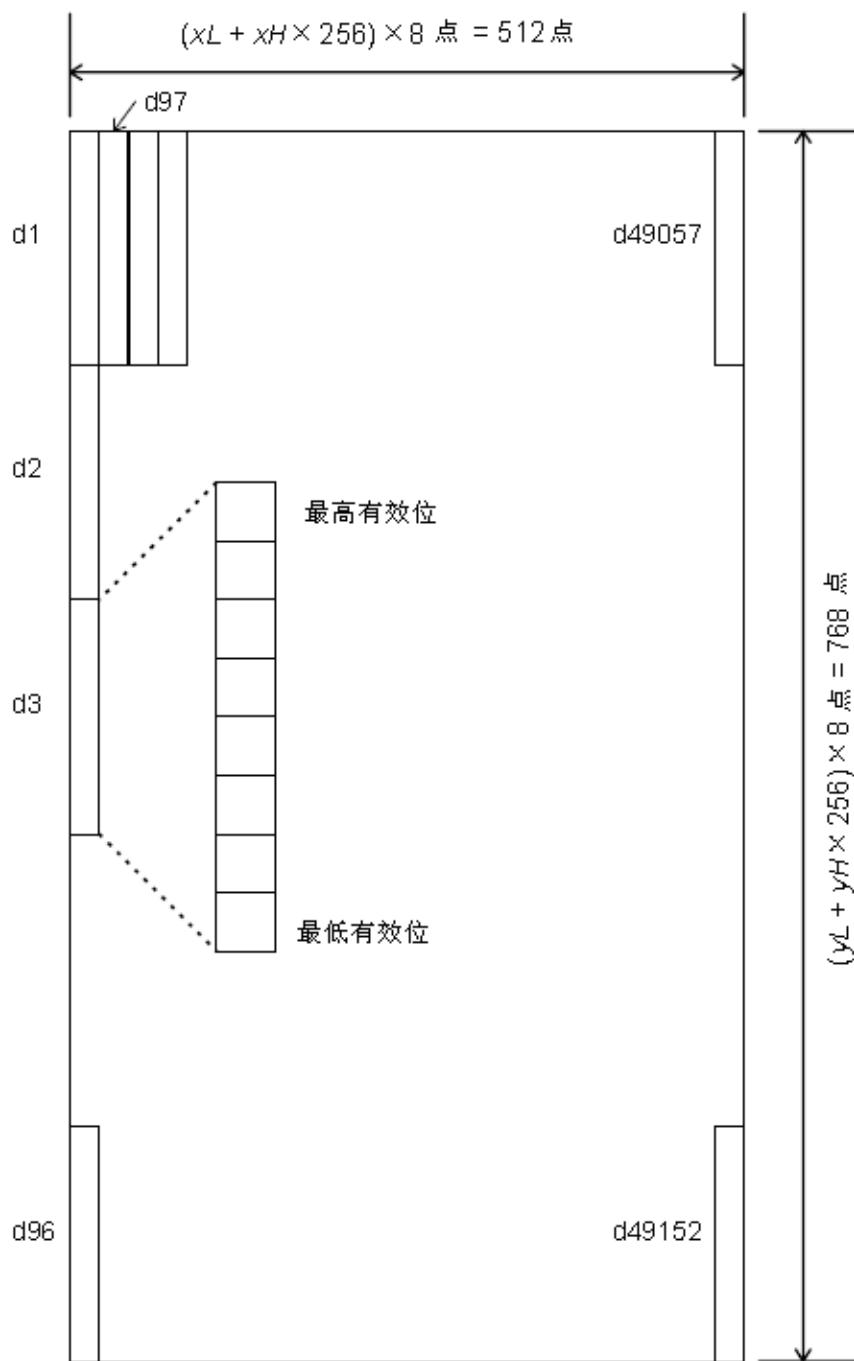

GS ! n

[Name]	Select character size
[Format]	ASCII: GS ! n
	Decimal: 29 33 n
	Hexadecimal: 1D 21 n
[Range]	0≤n≤255 (1≤vertical number of times≤8, 1≤horizontal number of times≤8)

[Description] Selects the character height using bits 0 to 2 and selects the character width using bits 4 to 7, as follows:

Bit	Off/On	Hex	Decimal	Function
0	Character height selection. See Table 2.			
1				
2				
3				
4	Character width selection. See Table 1.			
5				
6				
7				

Table 1
Character Width Selection

Hex	Decimal	Width
00	0	1(normal)
10	16	2(double-width)
20	32	3
30	48	4
40	64	5
50	80	6
60	96	7
70	112	8

Table 2
Character Height Selection

Hex	Decimal	Width
00	0	1(normal)
01	1	2(double-height)
02	2	3
03	3	4
04	4	5
05	5	6
06	6	7
07	7	8

- [Note]
- This command is effective for all characters (alphanumeric and Kanji), except for HRI characters.
 - If n is outside the defined range, this command is ignored.
 - In standard mode, the vertical direction is the paper feed direction, and the horizontal direction is perpendicular to the paper feed direction. However, when character orientation changes in 90° clockwise-rotation mode, the relationship between vertical and horizontal directions is reversed.
 - When characters are enlarged with different sizes on one line, all the characters on the line are aligned at the baseline.
 - The **ESC !** Command can also turn double-width and double-height modes on or off. However, the setting of the last received command is effective.

[Default] n=0


[Reference] **ESC !**

GS * x y d1...d(x × y × 8)

[Name] Define downloaded bit image

[Format] ASCII: GS * x y d1 ... d(x×y×8)

	Decimal:	$29\ 42\ x\ y\ d1\dots d(x\times y\times 8)$
	Hexadecimal:	$1D\ 2A\ x\ y\ d1\dots d(x\times y\times 8)$
[Range]	$1 \leq x \leq 255$ $1 \leq y \leq 48$ (where $x \times y \leq 1536$) $0 \leq d \leq 255$	
[Description]	Defines a downloaded bit image using the number of dots specified by x and y.	<ul style="list-style-type: none"> ● x specifies the number of dots in the horizontal direction. ● y specifies the number of dots in the vertical direction.
[Note]	<ul style="list-style-type: none"> ● The number of dots in the horizontal direction is $x \times 8$; in the vertical direction it is $y \times 8$. ● If $x \times y$ is out of the specified range, this command is disabled. ● The d indicates bit-image data. Data (d) specifies a bit printed as 1 and not printed as 0. ● The downloaded bit image definition is cleared when: <ol style="list-style-type: none"> 1) ESC @ is executed. 2) ESC & is executed. 3) Reset the printer or turn off the power. ● The following figure shows the relationship between the downloaded bit image and the printed data. 	

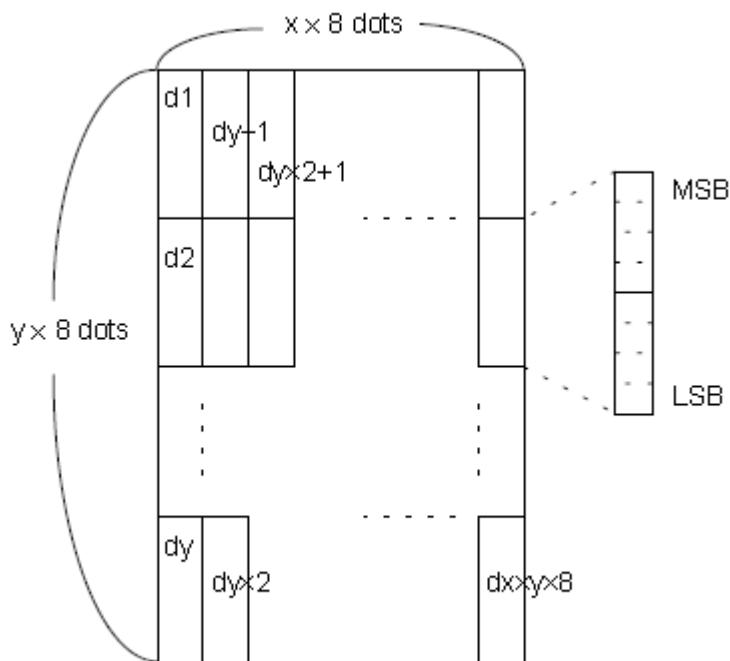

[Reference] **GS /**

GS / n

[Name]	Print downloaded bit image
[Format]	ASCII: GS / n

	Decimal:	29 47 n
	Hexadecimal:	1D 2F n
[Range]	0≤n≤3, 48≤n≤51	
[Description]	Prints a downloaded bit image using the mode specified by n. n selects a mode from the table below:	

n	Mode	Vertical Dot Density	Horizontal Dot Density
0, 48	Normal	203.2 dpi	203.2 dpi
1, 49	Double-width	203.2 dpi	101.6 dpi
2, 50	Double-height	101.6 dpi	203.2 dpi
3, 51	Quadruple	101.6 dpi	101.6 dpi

- [Note]
- This command is ignored if a downloaded bit image has not been defined.
 - In standard mode, this command is effective only when there is no data in the print buffer.
 - This command has no effect in the print modes (emphasized, double-strike, underline, character size, or white/black reverse printing), except for upsidedown printing mode.
 - If the downloaded bit-image to be printed exceeds the printable area, the excess data is not printed.

[Reference] **GS ***

GS B n

[Name]	Turn white/black reverse printing mode	
[Format]	ASCII:	GS B n
	Decimal:	29 66 n
	Hexadecimal:	1D 42 n
[Range]	0≤n≤255	
[Description]	Turns on or off white/black reverse printing mode. <ul style="list-style-type: none"> ● When the LSB of n is 0, white/black reverse mode is turned off. ● When the LSB of n is 1, white/black reverse mode is turned on. 	
[Note]	<ul style="list-style-type: none"> ● Only the lowest bit of n is valid. ● This command is available for built-in characters and user-defined characters. ● When white/black reverse printing mode is on, it also applies to character spacing set by ESC SP. ● This command does not affect bit images, user-defined bit images, bar codes, HRI characters, and spacing skipped by HT, ESC \$. ● This command does not affect the space between lines. ● White/black reverse mode has a higher priority than underline mode. Even if underline mode is on, it is disabled (but not canceled) when white/black reverse mode is selected. 	
[Default]	n=0	

GS H n

[Name]	Select printing position for HRI characters
[Format]	ASCII: GS H n
	Decimal: 29 72 n
	Hexadecimal: 1D 48 n
[Range]	0≤n≤3, 48≤n≤51
[Description]	Selects the printing position of HRI characters when printing a bar code. n selects the printing position as follows:


n	Printing position
0, 48	No printing
1, 49	Above the bar code
2, 50	Below the bar code
3, 51	Both above and below the bar code

HRI indicates Human Readable Interpretation.

[Note]	HRI characters are printed using the font specified by GS f .
[Default]	n=0
[Reference]	GS f, GS k

GS L nL nH

[Name]	Set left margin
[Format]	ASCII: GS L nL nH
	Decimal: 29 76 nL nH
	Hexadecimal: 1D 4c nL nH
[Range]	0≤nL≤255 0≤nH≤255
[Description]	Sets the left margin using nL and nH. The left margin is set to [(nL+nH×256) ×0.125 mm].

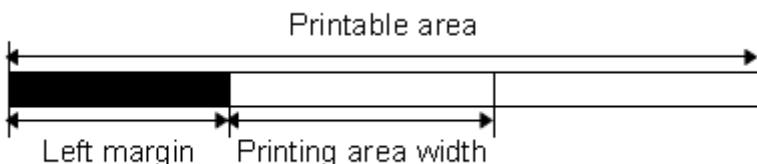

[Note]	<ul style="list-style-type: none"> This command is effective only when processed at the beginning of the line in standard mode. If the setting exceeds the printable area, the maximum value of the printable area is used.
[Default]	nL=0, nH=0

GS a n

[Name]	Enable/Disable Automatic Status Back(ASB)		
[Format]	ASCII:	GS a n	
	Decimal:	29 97 n	
	Hexadecimal:	1D 61 n	
[Range]	0≤n≤255		
[Description]	n definition as follows: When ASB is enabled, the printer will send the changed status to PC automatically.		

Bit	Function	Value	
		0	1
0	-	-	-
1	-	-	-
2	Disable/Enable ASB	Disable	Enable
3-4	-	-	-
5	Disable/Enable RTS as flow control	Disable	Enable
6-7	-	-	-

GS h n

[Name]	Set bar code height		
[Format]	ASCII:	GS h n	
	Decimal:	29 104 n	
	Hexadecimal:	1D 68 n	
[Range]	0≤n≤255		
[Description]	Selects the height of the bar code. n specifies the number of dots in the vertical direction.		
[Default]	n=162		
[Reference]	GS k		

①GS k m d1 d2 ... dk NUL**②GS k m n d1 d2 ... dn**

[Name]	Print bar code		
[Format ①]	ASCII:	GS k m d1 d2 ... dk NUL	
	Decimal:	29 107 m d1 d2 ... dk 0	
	Hexadecimal:	1D 6B m d1 d2 ... dk 00	
[Format ②]	ASCII:	GS k m n d1 d2 ... dn	
	Decimal:	29 107 m n d1 d2 ... dn	
	Hexadecimal:	1D 6B m n d1 d2 ... dn	
[Range ①]	0≤m≤6(k and d depend on the bar code system used)		
[Range ②]	65≤m≤73(n and d depend on the bar code system used)		

[Description] Selects a bar code system and prints the bar code.

m selects a bar code system as follows:

m	Bar Code System	Number of Characters	Remarks
①	0	UPC-A	11≤k≤12 48≤d≤57
	1	UPC-E	11≤k≤12 48≤d≤57
	2	JAN13 (EAN13)	12≤k≤13 48≤d≤57
	3	JAN 8 (EAN8)	7≤k≤8 48≤d≤57
	4	CODE39	1≤k' 48≤d≤57, 65≤d≤90, 32, 36, 37, 43, 45, 46, 47
	5	ITF	1≤k (even number) 48≤d≤57
	6	CODABAR	1≤k' 48≤d≤57, 65≤d≤68, 36, 43, 45, 46, 47, 58
②	65	UPC-A	11≤k≤12 48≤d≤57
	66	UPC-E	11≤k≤12 48≤d≤57
	67	JAN13 (EAN13)	12≤k≤13 48≤d≤57
	68	JAN 8 (EAN8)	7≤k≤8 48≤d≤57
	69	CODE39	1≤n≤255 48≤d≤57, 65≤d≤90, 32, 36, 37, 43, 45, 46, 47
	70	ITF	1≤n≤255 (even number) 48≤d≤57
	71	CODABAR	1≤n≤255 48≤d≤57, 65≤d≤68, 36, 43, 45, 46, 47, 58
	72	CODE93	1≤n≤255 0≤d≤127
	73	CODE128	2≤n≤255 0≤d≤127

[Notes for ①]

- This command ends with a NUL code.
- When the bar code system used is UPC-A or UPC-E, the printer prints the bar code data after receiving 12 bytes of bar code data and processes the following data as normal data.
- When the bar code system used is JAN13 (EAN13), the printer prints the bar code after receiving 13 bytes of bar code data and processes the following data as normal data.
- When the bar code system used is JAN8 (EAN8), the printer prints the bar code after receiving 8 bytes of bar code data and processes the following data as normal data.
- The number of data for the ITF bar code must be even numbers. When an odd number of bytes of data is input, the printer ignores the last received data.

[Notes for ②]

- n indicates the number of bar code data bytes, and the printer processes n bytes from the next character data as bar code data.
- If n is outside the specified range, the printer stops command processing and processes the following data as normal data.

[Notes in standard mode]

- If d is outside the specified range, the printer only feeds paper and

processes the following data as normal data.

- If the horizontal size exceeds printing area, the printer only feeds the paper.
- This command feeds as much paper as is required to print the bar code, regardless of the line spacing specified by **ESC 2** or **ESC 3**.
- This command is enabled only when no data exists in the print buffer. When data exists in the print buffer, the printer processes the data following m as normal data.
- After printing the bar code, this command sets the print position to the beginning of the line.
- This command is not affected by print modes (emphasized, double-strike, underline, character size, white/black reverse printing, or 90° rotated character, etc.), except for upside-down printing mode.

Control character			HRI character	Control character			HRI character
ASCII	Hex	Decimal		ASCII	Hex	Decimal	
NUL	00	0	■U	DEL	10	16	■P
SOH	01	1	■A	DC1	11	17	■Q
STX	02	2	■B	DC2	12	18	■R
ETX	03	3	■C	DC3	13	19	■S
EOT	04	4	■D	DC4	14	20	■T
ENQ	05	5	■E	NAK	15	21	■U
ACK	06	6	■F	SYN	16	22	■V
BEL	07	7	■G	ETB	17	23	■W
BS	08	8	■H	CAN	18	24	■X
HT	09	9	■I	EM	19	25	■Y
LF	0A	10	■J	SUB	1A	26	■Z
VT	0B	11	■K	ESC	1B	27	■A
FF	0C	12	■L	FS	1C	28	■B
CR	0D	13	■M	GS	1D	29	■C
SO	0E	14	■N	RS	1E	30	■D
SI	0F	15	■O	US	1F	31	■E
				DEL	7F	127	■T

[Example] Printing GS k 72 7 67 111 100 101 13 57 51



When CODE128 (m= 73) is used:

When using CODE128 in this printer, take the following points into account for data transmission:

- ① The top of the bar code data string must be the code set selection

character (CODE A, CODE B, or CODE C), which selects the first code set.

②Special characters are defined by combining two characters "{" and one character. The ASCII character "{" is defined by transmitting "{" twice consecutively.

Specific character	Transmit data		
	ASCII	Hex	Decimal
SHIFT	{S	7B, 53	123,83
CODE A	{A	7B, 41	123,65
CODE B	{B	7B,42	123,66
CODE C	{C	7B,43	123,67
FNC1	{1	7B,31	123,49
FNC2	{2	7B,32	123,50
FNC3	{3	7B,33	123,51
FNC4	{4	7B,34	123,52
"{"	{}{	7B,7B	123,123

[Example] Example data for printing "No. 123456"

In this example, the printer first prints "No." using CODE B, then prints the following numbers using CODE C.

GS k 73 10 123 66 78 111 46 123 67 12 34 56



- If the top of the bar code data is not the code set selection character, the printer stops command processing and processes the following data as normal data.
- If the combination of "{" and the following character does not apply any special character, the printer stops command processing and processes the following data as normal data.
- If the printer receives characters that cannot be used in the special code set, the printer stops command processing and processes the following data as normal data.
- The printer does not print HRI characters that correspond to the shift characters or code set selection characters.
- HRI character for the function character is space.
- HRI characters for the control character (<00>H to <1F>H and <7F>H) are space.

[Others] Be sure to keep spaces on both right and left sides of a bar code.
(Spaces are different depending on the types of the bar code.)

[Reference] **GS H, GS h, GS w**

GS x n

[Name]	Set bar code printing left space		
[Format]	ASCII:	GS	x n
	Decimal:	29	120 n
	Hexadecimal:	1D	78 n
[Description]	The print bar code staring positions is: 0→255		

GS r n

[Name]	Transmit status		
[Format]	ASCII:	GS	r n
	Decimal:	29	114 n
	Hexadecimal:	1D	72 n
[Range]	n=1, 49		
[Description]	Transmits the status specified by n as follows:		

n	Function
1, 49	Transmits paper sensor status

- [Note]
- When using a serial interface
 - 1) When DTR/DSR control is selected, the printer transmits only 1 byte after confirming the host is ready to receive data (DSR signal is SPACE). If the host computer is not ready to receive data (DSR signal is MARK), the printer waits until the host is ready.
 - 2) When XON/XOFF control is selected, the printer transmits only 1 byte without confirming the condition of the DSR signal.
 - This command is executed when the data in the receive buffer is developed. Therefore, there may be a time lag between receiving this command and transmitting the status, depending on the receive buffer status.
 - When Auto Status Back (ASB) is enabled using GS a, the status transmitted by GS r and the ASB status must be differentiated using.
 - The status types to be transmitted are shown below:

Paper sensor status (n = 1, 49):


Bit	Off/On	Hex	Decimal	Status for ASB
0,1	-	-	-	Undefined.
2,3	Off	00	0	Paper roll end sensor: paper adequate.
	On	(0C)	(12)	Paper roll end sensor: paper near end.
4	Off	00	0	Not used. Fixed to Off.
5,6	-	-	-	Undefined.
7	Off	00	0	Not used. Fixed to Off.

Bits 2 and 3: When the paper end sensor detects a paper end, the printer goes offline and does not execute this command. Therefore, bits 2 and 3 do not transmit the status of paper end.

[Reference] **GS a**

GS v 0 m xL xH yL yH d1....dk

[Name]	Print raster bit image		
[Format]	ASCII:	GS v 0 m xL xH yL yH d1...dk	
	Decimal:	29 118 48 m xL xH yL yH d1...dk	
	Hexadecimal:	1D 76 30 m xL xH yL yH d1...dk	
[Range]	0≤m≤3, 48≤m≤51 0≤xL≤255 0≤xH≤255, where $1 \leq (xL+xH \times 256) \leq 48$ 0≤yL≤255 0≤yH≤8, where $1 \leq (yL+yH \times 256) \leq 4095$ 0≤d≤255 $k = (xL+xH \times 256) \times (yL+yH \times 256)$ ($k \neq 0$)		
[Description]	Selects raster bit-image mode. The value of m selects the mode, as follows:		
m	Mode	Vertical Dot Density	Horizontal Dot Density
0, 48	Normal	203.2 dpi	203.2 dpi
1, 49	Double-width	203.2 dpi	101.6 dpi
2, 50	Double-height	101.6 dpi	203.2 dpi
3, 51	Quadruple	101.6 dpi	101.6 dpi
[Note]	<ul style="list-style-type: none"> ● xL, xH, select the number of data bytes ($xL+xH \times 256$) in the horizontal direction for the bit image. ● yL, yH, select the number of data bits ($yL+yH \times 256$) in the vertical direction for the bit image. ● In standard mode, this command is effective only when there is no data in the print buffer. ● This command is not affected by print modes (character size, emphasized, double-strike, upside-down, underline, white/black reverse printing, etc.) for raster bit image. ● Data outside the printing area is read in and discarded on a dot-by-dot basis. ● The position at which subsequent characters are to be printed for raster bit image is specified by HT (Horizontal Tab), ESC \$ (Set absolute print position), and GS L (Set left margin). If the position at which subsequent characters are to be printed is a multiple of 8. ● The ESC a (Select justification) setting is also effective on raster bit images. ● d indicates the bit-image data. Setting a bit to 1 print a dot and setting it to 0 does not print a dot. 		
[Example]	When $xL+xH \times 256 = 64$		

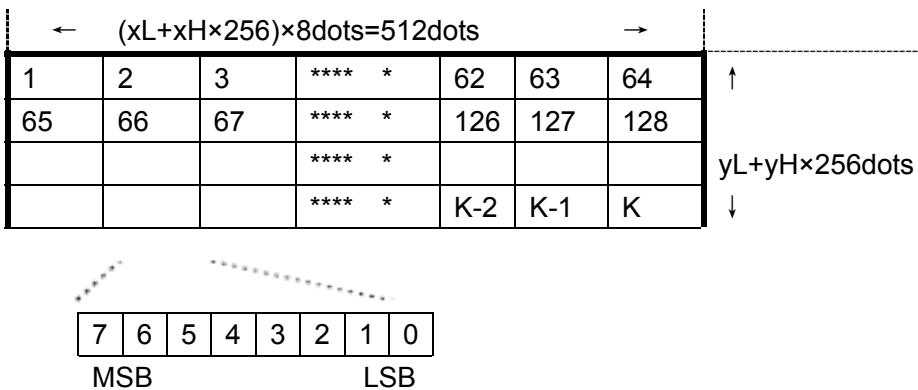**GS w n**

[Name]	Set bar code width
[Format]	ASCII: GS w n
	Decimal: 29 119 n
	Hexadecimal: 1D 77 n
[Range]	2≤n≤6
[Description]	Sets the horizontal size of the bar code. n specifies the bar code width as follows:

n	Module Width (mm) for Multi-level Bar Code	Binary-level Bar Code	
		Thin Element Width (mm)	Thick Element Width(mm)
2	0.250	0.250	0.625
3	0.375	0.375	1.000
4	0.560	0.500	1.250
5	0.625	0.625	1.625
6	0.750	0.750	2.000

- Multi-level bar codes are as follows:
UPC-A, UPC-E, JAN13 (EAN13), JAN8 (EAN8), CODE93, CODE128
- Binary-level bar codes are as follows:
CODE39, ITF, CODABAR

[Default]	n=3
[Reference]	GS k

GS (k pL pH cn fn n1 n2 (fn=65)

[名称]	指定的模式
[格式]	ASCII GS (k pL pH cn fn n1 n2 十六进制 1D 28 6b pL pH cn fn n1 n2 十进制 29 40 107 pL pH cn fn n1 n2
[范围]	pL=4, pH=0 cn=49 fn=65

n1=49, 50

n2=0

[描述] 通过n1指定QR码的模式

n	功能
49	指定模式1转换处理
50	指定模式2转换处理

GS (k pL pH cn fn n (fn=67)

[名称] 设置的模块类型

[格式] ASCII GS (k pL pH cn fn n
 十六进制 1D 28 6b pL pH cn fn n
 十进制 29 40 107 pL pH cn fn n

[范围] pL=3, pH=0
 cn=49
 fn=67
 0 ≤ n ≤16

[缺省] n=3

[描述] 设置QR码图形模块的类型到[n 点× n 点]。、

GS (k pL pH cn fn n (fn=69)

[名称] 设置QR码的错误校正水平误差

[格式] ASCII GS (k pL pH cn fn n
 十六进制 1D 28 6b pL pH cn fn n
 十进制 29 40 107 pL pH cn fn n

[范围] pL=3, pH=0
 cn=49
 fn=69
 48 ≤ n ≤51

[缺省] n=48

[描述] 设置QR码的错误校正水平误差

n	功能	参考: 恢复的大概代表 (%)
48	错误校正水平误差L	7
49	错误校正水平误差m	15
50	错误校正水平误差q	25
51	错误校正水平误差 h	30

GS (k pL pH cn fn m d1...dk (fn=80)

[名称] 存储接收QR码的数据在二维条码的区域里

[格式] ASCII GS (k pL pH cn fn m d1...dk
 十六进制 1D 28 6b pL pH cn fn m d1...dk
 十进制 29 40 107 pL pH cn fn m d1...dk

[范围] 4≤(pL + pH×256) ≤7092 (0 ≤ pL ≤255, 0 ≤ pH ≤28)

cn=49

fn=80

m=48

0 ≤ d ≤255

k=(pL + pH×256) -3

- [描述] 存储二维码的数据(d1...dk)在QR码二维条码的区域里。
 $((pL + pH \times 256) - 3)$ 的字节在m(d1...dk)后作为图形的数据被处理。

GS (k pL pH cn fn m (fn=81)

[名称] 打印接收PDF417的数据在二维条码的区域里

[格式] ASCII GS (k pL pH cn fn m
 十六进制 1D 28 6b pL pH cn fn m
 十进制 29 40 107 pL pH cn fn m

[范围] pL=3, pH=0
 cn=49
 fn=81
 m=48

- [描述] 打印接收QR码的数据在二维条码的区域里。
 用户必须考虑QR码图形的空间 (QR码图形上下的间距和左右的间距被指定在规格里)。

GS (k pL pH cn fn m (fn=82)

[名称] 传送QR码的图形的数据信息的类型在二维条码的区域里

[格式] ASCII GS (k pL pH cn fn m
 十六进制 1D 28 6b pL pH cn fn m
 十进制 29 40 107 pL pH cn fn m

[范围] pL=3, pH=0
 cn=49
 fn=82
 m=48

- [描述] 传送QR码的图形的数据信息的类型在二维条码的区域里。
 下面是图形类型信息的基本类型:

发送数据	十六进制	十进制	数据类型
Header	37H	55	1byte
Flag	36H	54	1byte
Width	30H-39H	48-57	1-5byte
Separator	1FH	31	1byte
Height	30H-39H	48-57	1-5byte
Separator	1FH	31	1byte
Fixed Value	31H	49	1byte
Separator	1FH	31	1byte
Other Information	30H or 31H	48 or 49	1byte
NUL	00H	0	1byte

宽度和高度的数据发送:

- 图形数据的高度和宽度值是以点为单位。

其他信息数据发送:

- “十六进制=30H/十进制=48” 表示数据不被打印。
- “十六进制=31H/十进制=49” 表示数据不被打印。

[注意] 该命令不打印QR码图形。

用户必须考虑 QR 码图形的空间（QR 码图形上下的间距和左右的间距被指定在规格里）。

FS ! n

[Name] Set print mode(s) for Kanji characters

[Format] ASCII: FS ! n

Decimal: 28 33 n

Hexadecimal: 1C 21 n

[Range] 0≤n≤255

[Description] Sets the print mode for Kanji characters, using n as follows:

Bit	Off/On	Hex	Decimal	Function
0	—	—	—	Undefined.
1	—	—	—	Undefined.
2	Off	00	0	Double-width mode is OFF.
	On	04	4	Double-width mode is ON.
3	Off	00	0	Double-height mode is OFF.
	On	08		Double-height mode is ON.
4	—	—	—	Undefined.
5	—	—	—	Undefined.
6	—	—	—	Undefined.
7	Off	00	0	Underline mode is OFF.
	On	80	128	Underline mode is ON.

[Note]

- When both double-width and double-height modes are set (including right- and left-side character spacing), quadruple-size characters are printed.
- The printer can underline all characters (including right- and left-side character spacing), but cannot underline the space set by **HT** and 90° clockwise-rotated characters.
- When some of the characters in a line are double or more height, all the characters on the line are aligned at the baseline.
- It is possible to emphasize the Kanji character using **GS !**; the setting of the last received command is effective.

[Default] n=0

[Reference] **GS !**

FS &

[Name] Select Kanji character mode

[Format] ASCII: FS &

	Decimal:	28 38
	Hexadecimal:	1C 26
[Description]	Selects Kanji character mode	
[Note]	For Kanji model:	
	<ul style="list-style-type: none"> When the Kanji character mode is selected, the printer processes all Kanji code as two bytes each. Kanji codes are processed in the order of the first byte and second byte. Kanji character mode is not selected when the power is turned on. 	
[Reference]	FS .	

FS.

[Name]	Cancel Kanji character mode
[Format]	ASCII: FS .
	Decimal: 28 46
	Hexadecimal: 1C 2E
[Description]	Cancels Kanji character mode.
[Note]	For Kanji model:
	<ul style="list-style-type: none"> When the Kanji character mode is not selected, all character codes are processed one byte at a time as ASCII code. Kanji character mode is not selected when the power is turned on.
[Reference]	FS &

ESC = n

[Name]	Set peripheral device
	ASCII: ESC = n
[Format]	Decimal: 27 61 n
	Hexadecimal: 1B 3d n
[Description]	Set peripheral device:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Printer offline, not receive print data.
	On	01	1	Printer online, receiving print data.
1-7	-	-	-	Undefined.

ESC 7 n1 n2 n3

[Name]	Setting Control Parameter Command
[Format]	ASCII: ESC 7 n1 n2 n3
	Decimal: 27 55 n1 n2 n3
	Hexadecimal: 1B 37 n1 n2 n3

- [Description] ● Set “max heating dots”, “heating time”, “heating interval”
 n1=0-255 Max printing dots, Unit(8dots),Default:9(80 dots)
 n2=0-255 Heating time, Unit (10us), Default: 80.
 n3=0-255 Heating interval, Unit (10us), Default: 2.
 ● The more max heating dots, the more peak current will cost when printing, the faster printing speed. The max heating dots is $8*(n1+1)$
 ● The more heating time, the more density, but the slower printing speed. If heating time is too short, blank page may occur.
 ● The more heating interval, the clearer, but the slower printing speed.
 Introductions: Control Board will adjust “Heating time”、 “Heating interval” automaticly, according to the input voltage

ESC 8 n1 n2

- [Name] Set Sleep parameter
 [Format] ASCII: ESC 8 n1 n2
 Decimal: 27 56 n1 n2
 Hexadecimal: 1B 38 n1 n2
 [Description] Setting the time for control board to enter sleep mod;
 n1+n2*256, the time waiting for sleep after printing finished, Unit (10 ms),
 Default: 0;
 Value 0 means no sleeping, when it's not equal to 0, the minimum value is 200ms.
 When control board is in sleep mode, host must send one byte (0xff) to wake up control board. And waiting 50ms, then send printing command and data.
 [Note] **The command is useful when the system is powered by battery.**

ESC 9 n

- [Name] Select Chinese code format
 [Format] ASCII: ESC 9 n
 Decimal: 27 57 n
 Hexadecimal: 1B 39 n
 [Description] Select Chinese code format, n from the character code table as follows:
 0: GBK code.
 1: UTF-8 code.
 3: BIG5 code.
 [Note] This version is not support English.

DC2 T

[Name]	Printing test page		
[Format]	ASCII:	DC2	T
	Decimal:	18	84
	Hexadecimal:	12	54
[Description]	Printing the test page		

ESC c 5 n (for buttons)

[Name]	Enable/disable panel buttons					
[Format]	ASCII: ESC c 5 n					
	Decimal: 27 99 53 n					
	Hexadecimal: 1B 03 35 n					
[Range]	0≤n≤255					
[Description]	Enable/disable panel buttons (support the panel buttons)					
	<ul style="list-style-type: none"> ● When the LSB of n is 0, the panel buttons are enabled. ● When the LSB of n is 1, the panel buttons are disabled. 					
[Default]	n=0					

8 Schedules

8.1 Character code table

Page0 PC437 Page3 CP860 [Portuguese]

E	α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	ϕ	ε	∩
F	≡	+	≥	≤	∫	ʃ	÷	≈	◦	•	•	√	n	z	█	

Page 1 Katakana

-	-	■	■	■	■	■	□	□	□	□	□	□	□	+
ト	ト	ト	ト	□	一	一	レ	レ	レ	レ	レ	レ	レ	ノ
。	।	」	、	・	ヲ	ア	イ	ウ	エ	オ	ヤ	ユ	ヨ	ツ
ア	イ	ウ	エ	オ	カ	キ	ク	ケ	コ	サ	シ	ス	セ	リ
チ	ツ	テ	ト	ナ	ニ	ヌ	ネ	ノ	ハ	ヒ	フ	ヘ	赤	マ
ミ	ム	メ	モ	ヤ	リ	ヨ	ラ	リ	ル	レ	ロ	リ	ン	。
ト	ト	ト	ト	ト	ト	ト	ト	ト	ト	ト	ト	ト	ト	ト
×	円	年	月	日	時	分	秒	元	市	区	町	村	人	。

Page2 PC850 [Multilingual]

F - + = $\frac{3}{4}$ ¶ § ÷ , ° .. . 1 3 2 █

Page3 PC860 [Portuguese]

Code page 860																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	Ç	ü	é	â	ã	à	Á	ç	ê	Ê	è	Í	Ô	ì	Ã	Â
9_	É	À	È	Ô	Õ	Ò	Ú	Ù	Ì	Õ	Ü	¢	£	Ù	₱	Ó
A_	á	í	ó	ú	ñ	Ñ	a	o	¿	ò	¬	½	¼	i	«	»
B_	[dotted]	[dotted]	[crossed]		⊤	⊥	⊤	⊥	⊤	⊥		⊤	⊥	⊤	⊥	⊤
C_	∟	⊥	⊤	⊤	—	+	⊤	⊤	∟	∟	⊤	⊤	⊤	⊤	⊤	⊤
D_	⊤	⊤	⊤	∟	∟	⊤	⊤	+	+	⊤	⊤	■	▬	█	█	█
E_	α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	ϕ	ε	∩
F_	≡	±	≥	≤	∫	J	÷	≈	°	•	•	√	n	²	█	█

Page4 PC863 [Canadian-French]

E	α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	φ	ε	\cap
F	\equiv	\perp	\geqslant	\leqslant	\vdash	\bigcup	\div	\approx	\circ	\bullet	\cdot	\checkmark	n	z		

Page5 pc865[Nordic]

Page6 pc1251 [Cyrillic]

Code page 1251																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	Ђ	Ѓ	,	Ѓ	„	…	†	‡	€	%	Љ	<	Њ	Ќ	Ћ	Џ
9_	Ђ	‘	’	“	”	•	-	-		™	љ	>	њ	ќ	ћ	Џ
A_		ў	ў	Ј	Ѡ	Ѓ		§	Ё	©	Є	«	”	-	®	Ї
B_	°	±	І	і	ѓ	µ	҆	.	ё	№	€	»	j	S	s	ї
C_	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
D_	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Њ	Ы	Ь	Э	Ю	Я

е	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
ғ	р	с	т	ү	ф	х	ц	ч	ш	щ	ъ	ы	ь	ә	ю	я

Page7 pc866 Cyrillic #2

Page8 MIK[Cyrillic /Bulgarian]

E_-	α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	ϕ	ε	\cap
F_-	\equiv	\pm	\geq	\leq	\vdash	\vdash	\div	\approx	\circ	\cdot	\cdot	\checkmark	n	z	\blacksquare	

Page9 CP755

Page10 Iran

Code page Iran																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	,	-	؟	ۚ	ۜ	ۖ
9_	ا	ل	ب	پ	پ	پ	ت	ت	ث	ث	ج	ج	چ	چ	ح	ح
A_	خ	خ	د	ذ	ر	ز	ژ	س	س	ش	ش	ص	ض	ض	ط	ط
B_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	۰	۱	۲	۳	۴	۵
C_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	۰	۱	۲	۳	۴	۵
D_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	۰	۱	۲	۳	۴	۵

E	ظ	ع	ع	ع	ع	غ	خ	خ	غ	ف	ف	ق	ق	ك	ك	گ
F	گ	ل	ل	لا	لـ	مـ	نـ	نـ	وـ	هـ	هـ	هـ	هـ	يـ	يـ	يـ

Page15 CP862 [Hebrew]

Page 16 PC1252 Latin 1

Code page 1252																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	€	,	f	,,	...	†	‡	^	°	š	‘	Œ		ž		
9_		,	“	”	•	—	—	~	™	š	’	œ		ž	ÿ	
A_		í	ø	ƒ	¤	¥		§	..	©	¤	«	¬	—	®	—
B_	°	±	²	³	‘	µ	¶	.	,	¹	º	»	¼	½	¾	¿
C_	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D_	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß

E	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	p	ÿ

Page 17 WCP1253 [Greek]

Code page 1253																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8	€	,	ƒ	„	…	†	‡		%o		„					
9	‘	’	“	”	•	—	—		TM		>					
A	“	’	À	£	¤	¥	‘	§	”	©		«	”	-	®	—
B	º	±	²	³	‘	µ	¶	·	Œ	Ή	Ί	»	’O	½	Ύ	Ώ
C	ĩ	À	฿	Γ	Δ	Ѐ	ܶ	ܹ	ܷ	ܸ	ܹ	ܷ	ܸ	ܷ	ܷ	ܷ
D	∏	ƿ		Σ	Ͳ	Ƴ	Φ	Х	Ѱ	ܷ	ܷ	ܷ	ܷ	ܷ	ܷ	ܷ
E	Ӯ	α	β	γ	δ	ε	ζ	η	θ	ι	κ	λ	μ	ν	ξ	օ
F	π	ρ	ς	σ	τ	ս	Փ	χ	ψ	ω	ִ	ֻ	ּ	ֽ	ּ	ֽ

Page18 PC852

E	Ó	ß	ô	Ń	ń	ň	š	š	Ŕ	Ú	ŕ	ű	ý	Ý	ť	'	o
F	-	"	,	ˇ	˘	§	÷	,	°	..	•	ü	Ř	ř	■		

Page19 PC858 (Multilingual Latin | +Euro)

Page20 Iran II

Code page Iran II																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	,	-	؟	ـ	ئ	ء
9_	ا	ل	ب	ب	پ	پ	ت	ت	ث	ث	ج	ج	چ	چ	ح	ه
A_	خ	خ	د	ذ	ر	ز	س	س	ش	ش	ص	ص	ض	ض	ط	ط
B_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	۰	۱	۲	۳	۴	۵
C_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	۰	۱	۲	۳	۴	۵
D_	۰	۱	۲	۳	۴	۵	۶	۷	۸	۹	۰	۱	۲	۳	۴	۵

Page21 Latvian

Code page Latvian																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
9_	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ь	Ы	Ь	Э	Ю	Я
A_	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
B_						A		ņ							ō	
C_							ā									
D_	š		č	ć	ī	ī								ū	ū	
E_	p	c	t	u	ф	x	ц	ч	ш	щ	ь	ы	ь	э	ю	я
F_	Ē	ē	Ģ	K	K	ſ	J	Ž	Ž	ō			N	Š		

Page22 CP864 [Arabic]

E	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ	ـ
F	□	س	س	ن	ه	ه	ي	ي	غ	غ	ق	ل	ل	ك	ي	غ	م

Page23 ISO-8859-1 [West Europe]

Code page 8859-1																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	€		II	III	IV	↑	↓			ő	Š	<	Œ			
9_						V	VI				Š	>	œ			Ÿ
A_	ı	ø	ƒ	ꝝ	¥	׀	§	..	©	ª	«	¬	-	®	—	
B_	º	±	²	³	”	µ	¶	.	,	¹	º	»	¼	½	¾	¿
C_	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D_	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E_	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F_	ő	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	b	ÿ

Page24 CP737 [Greek]

E_	ω	à	é	ń	ü	ł	ó	ú	ö	ώ	À	É	Ń	Ó	Ώ
F_	Ω	±	≥	≤	Ї	Ŷ	÷	≈	°	•	·	√	n	2	■

Page25 WCP1257 [Baltic]

Code page 1257																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	€	,		„	…	†	‡		‰		<		..	ˇ	„	
9_		‘	,	“	”	•	—	—	TM		>		—	„		
A_			¢	£	¤		፣	§	Ø	©	Ŗ	«	¬	-	®	Æ
B_	º	±	²	³	’	µ	¶	·	Ø	¹	ř	»	¼	½	¾	æ
C_	Ą	҆	Ā	Ć	Ä	Å	Ę	Ē	Č	É	Ž	Ę	Ğ	Ķ	Ī	Ł
D_	Š	Ń	᷑	Ó	ō	ő	ö	×	ყ	ლ	Ś	Ū	Ü	Ż	Ž	Ը
E_	ą	҆	ā	ć	ä	å	ę	ē	č	é	ž	ę	ǵ	ķ	ī	ł
F_	š	ń	᷑	ó	ō	ő	ö	÷	ყ	լ	ś	ū	ü	ż	ž	Ը

Page26 Thai

Page27 CP720[Arabic]

Page28 CP855

	<u>0</u>	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u>	<u>А</u>	<u>В</u>	<u>С</u>	<u>Д</u>	<u>Е</u>	<u>Ф</u>
8	Ђ	Ђ	Ѓ	Ѓ	ё	Ё	€	Є	ѕ	Ѕ	і	І	ї	Ї	ј	Ј
9	љ	љ	њ	њ	ћ	Ћ	ќ	Ќ	ў	Ў	џ	Џ	ю	Ю	њ	Њ
А	а	А	б	Б	ц	Ц	д	Д	е	Е	Ѡ	Ѡ	г	Г	«	»
в	ѿ	ѿ	ѿ	ѿ		ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ
с	Ӆ	Ӯ	ӭ	ӭ	-	Ӯ	ӯ	ӯ	Ӆ	Ӯ	Ӯ	Ӯ	Ӯ	=	Ӯ	Ӯ
¤	л	Л	м	М	н	Н	о	О	п	҂	Ր	Ր	Ր	Ր	я	Ր
е	ѧ	Ր	ր	ս	ս	տ	Տ	ւ	ւ	յ	Ժ	Վ	Վ	Ե	Ե	Նօ
ֆ	-	ы	ы	з	з	ш	ш	э	Э	щ	Щ	Ч	Ч	§	■	

Page29 PC857 [Turkish]

	<u>0</u>	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u>	<u>А</u>	<u>В</u>	<u>С</u>	<u>Д</u>	<u>Е</u>	<u>Ф</u>
8	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	I	Ä	Å
9	É	æ	Æ	ô	ö	ò	û	ù	ı	ö	Ü	ø	£	Ø	Ş	ş
А	á	í	ó	ú	ñ	Ñ	ѓ	ѓ	®	‑	½	¼	ı	«	»	
в	ѿ	ѿ	ѿ	ѿ		ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ	ѿ
с	Ӆ	Ӯ	ӭ	ӭ	-	Ӯ	ӯ	ӯ	Ӆ	Ӯ	Ӯ	Ӯ	Ӯ	-	Ӯ	Ӯ
¤	o	a	Ê	Ë	È				í	î	ï	ı	ı	ì	ı	ı
е	Ó	Ծ	Ô	Ը	Ծ	Ը	Ը	Ը	X	Ú	Û	Ù	Ù	ÿ	—	,
ֆ	-	±		¾	¶	§	÷	,	°	..	•	1	3	2	■	

Page30 WCP1250 [Central Europe]

Code page-1250																
	-0	-1	-2	-3	-4	-5	-6	-7	-8	-9	-A	-B	-C	-D	-E	-F
8_	€	,		„	…	†	‡		‰	Š	‘	Ś	Ť	Ž	Ź	Ź
9_		‘	,	”	”	•	—	—	™	Š	›	Ś	ť	ž	ż	ż
A_	ˇ	˘	Ł	Œ	À	Í	§	˝	©	Ş	«	¬	-	®	Ż	ż
B_	º	±	„	ł	’	μ	¶	·	„	ą	ş	»	Ł	”	ń	ż
C_	Ŕ	Á	Â	Ă	Ä	Ĺ	Ć	Ç	Č	É	Ę	Ë	Ě	Í	Î	Đ
D_	Đ	Ń	Ň	Ó	Ô	Ő	Ö	×	Ř	Ů	Ú	Ű	Ü	Ý	Ț	Ծ
E_	ŕ	á	â	ă	ä	í	ć	ç	č	é	ę	ë	ě	í	î	đ
F_	đ	ń	ň	ó	ô	ő	ö	÷	ř	ů	ú	ű	ü	ý	ț	.

Page31 CP775

Page32 WCP1254[Turkish]

Code page-1254																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	€	,	ƒ	„	…	†	‡	^	%	Š	<	Œ				
9_		‘	’	“	”	•	—	—	~	™	Š	>	œ			Ÿ
A_		ı	¢	£	¤	¥	ı	§	..	©	ä	«	¬	-	®	—
B_	°	±	²	³	‘	µ	¶	.	,	¹	º	»	¼	½	¾	¸
C_	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D_	Ѓ	Њ	Ѡ	Ó	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ
E_	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F_	ѓ	њ	Ѡ	ó	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ

Page33 WCP1255 [Hebrew]

Code page-1255																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	€	,	ƒ	„	…	†	‡	^	%		<					
9_		‘	’	“	”	•	—	—	~	™		>				
A_	ı	¢	£	¤	¥	ı	§	..	©	×	«	¬	-	®	—	
B_	°	±	²	³	‘	µ	¶	.	,	¹	÷	»	¼	½	¾	¸
C_	ׁ	ׂ	׃	ׄ	ׅ	׆	ׇ	׈	׉	׊	׋	׌	׍	׏	׏	׏
D_	ׁ	ׂ	׃	ׄ	ׅ	׆	ׇ	׈	׉	׊	׋	׌	׏	׏	׏	׏
E_	ׁ	ׂ	׃	ׄ	ׅ	׆	ׇ	׈	׉	׊	׋	׌	׏	׏	׏	׏
F_	ׁ	ׂ	׃	ׄ	ׅ	׆	ׇ	׈	׉	׊	׋	׌	׏	׏	׏	׏

Page34 WCP1256[Arabic]

Page35 WCP1258 [Vietnam]

Code page-1258																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_	€	,	f	„	…	†	‡	^	%o		‘	Œ				
9_		‘	’	“	”	•	-	-	~	TM		>	œ			ÿ
A_	ı	ç	£	¤	¥	ı	§	..	©	ä	«	¬	-	®	-	
B_	°	±	²	³	’	µ	¶	.	,	¹	º	»	¼	½	¾	¿
C_	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	`	Í	Î	Ï
D_	Đ	Ñ	º	Ó	Ô	Ը	Ö	×	Ø	Ù	Ú	Û	Ü	Ւ	~	Ծ
E_	à	á	â	ă	ä	å	æ	ç	è	é	ê	ë	’	í	î	ï
F_	đ	ñ	.	ó	ô	Ը	ö	÷	ø	ù	ú	û	ü	ւ	đ	ÿ

Page36 ISO-8859-2[Latin 2]

Page37 ISO-8859-3[Latin 3]

Code page-8859-3																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_																
9_																
A_		ମ	ୟ	ଫ	କ୍ଷ		ହ	୧		ି	ସ	୍ରୀ	ଜ	-		ଜୀ
B_	୦	ଙ	୨	୩	୯	ମ	ହ	୧		ଙ	ସ	୍ରୀ	ଜ	୧୧୨		ଜୀ
C_	ା	ା	ା			ା	ଚ	ଚ	ଚ୍ଛ	େ	େ	େ	ି	ି	ି	ି
D_		ନ	ୠ	୦	୭	ଗ	୭	ଗ୍ରୀ	ଗ୍ରୀ	ୱ	ୱ	ୱ	ୱ	ୱ	ୱ	ବ୍ରୀ
E_	ା	ା	ା			ା	ଚ	ଚ	ଚ୍ଛ	େ	େ	େ	ି	ି	ି	ି
F_		ନ	ୠ	୦	୭	ଗ	୭	ଗ୍ରୀ	ଗ୍ରୀ	ୱ	ୱ	ୱ	ୱ	ୱ	ୱ	ବ୍ରୀ

Page38 |SO-8859-4[Baltic]

9_																			
A_		Ӑ	Ӗ	Ҫ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	
B_	°	ӑ	ӗ	ҫ	’	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	
C_	Ӑ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	
D_	ڏ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	ڻ	
E_	ܾ	ܾ	ܾ	ܾ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	ܶ	
F_	ܰ	ܱ	ܲ	ܳ	ܴ	ܵ	ܶ	ܷ	ܸ	ܹ	ܺ	ܻ	ܼ	ܼ	ܼ	ܼ	ܼ	ܼ	

Page39 ISO-8859-5[Cyrillic]

Code page-8859-5																		
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F		
8_																		
9_																		
A_	Ӭ	Ӭ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ	Ӯ
B_	Ӑ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ	Ӓ
C_	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ	Ҫ
D_	ܰ	ܱ	ܲ	ܳ	ܴ	ܵ	ܶ	ܷ	ܸ	ܹ	ܺ	ܻ	ܼ	ܼ	ܼ	ܼ	ܼ	ܼ
E_	ܰ	ܱ	ܲ	ܳ	ܴ	ܵ	ܶ	ܷ	ܸ	ܹ	ܺ	ܻ	ܼ	ܼ	ܼ	ܼ	ܼ	ܼ
F_	ܮ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ	ܯ

Page40 ISO-8859-6[Arabic]

Code page-8859-6																		
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F		
8_																		
9_																		
A_					ܮ										‘	—		
B_															:			ܮ

C_		ء	ـ	أ	ؤ	إ	ئ	ا	ب	ة	ت	ث	ج	ح	خ	د
D_	ذ	ر	ز	س	ش	ص	ض	ط	ظ	ع	غ					‘
E_	—	ف	ق	ك	ل	م	ن	ه	و	ي	ي	ڻ	ڻ	ڻ	ڻ	ڻ
F_	ڻ	ڻ	ڻ													

Page41 ISO-8859-7[Greek]

Code page-8859-7																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_																
9_																
A_		‘	,	£			ı	§	..	©	‘	«	¬	—	—	—
B_	°	±	²	³	ˊ	ˇ	՚	՚	՚	՚	՚	՚	՚	՚	՚	՚
C_	ߵ	߶	߷	߸	߹	ߺ	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻
D_	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻
E_	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻
F_	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻	߻

Page42 ISO-8859-8[Hebrew]

Code page-8859-8																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_																
9_																
A_			¢	£	¤	¥	׀	׮	׮	׮	׮	׮	׮	׮	׮	׮
B_	°	±	²	³	ˊ	µ	₪	·	,	׮	׮	׮	׮	׮	׮	׮
C_																
D_																=
E_	܂	܃	܄	܅	܆	܇	܈	܉	܊	܋	܌	܍	܎	܏	ܐ	ܑ

F_	ı	đ	ü	ş	پ	ڙ	ڙ	ڙ	ڙ	ڙ	ڙ	ڙ	ڙ	ڙ	ڙ	ڙ
----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Page43 ISO-8859-9[Turkish]

Code page-8859-9																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_																
9_																
A_		i	¢	£	¤	¥	¦	§	..	©	â	«	¬	-	®	—
B_	°	±	²	³	‘	µ	¶	.	,	¹	º	»	¼	½	¾	˙
C_	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D_	Ğ	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	İ	Ş	ß
E_	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F_	ğ	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ı	ş	ÿ

Page44 ISO-8859-15 [Latin 3]

Code page-8859-15																
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F
8_																
9_																
A_		i	∅	£	€	¥	Š	§	š	©	â	«	¬	-	®	—
B_	°	±	²	³	Ž	µ	¶	.	ž	¹	º	»	Œ	œ	Ÿ	˙
C_	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D_	Đ	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E_	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F_	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

Page45 Thai2

ກ	ກ	ລ	ຈ	ີ	ຶ	ຫ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ກໍາ	ກໍາ	ລໍາ	ຈໍາ	ີໍາ	ຶໍາ	ຫໍາ	ິໍາ	ືໍາ	ູໍາ	ັໍາ	ຳໍາ	ີໍາ	ືໍາ	ົໍາ	ັໍາ	ີໍາ	ືໍາ	ົໍາ
ມ	ມ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ສ	ສ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ນ	ນ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ກ	ກ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ຂ	ຂ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ບ	ບ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ດ	ດ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ຈ	ຈ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ສ	ສ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ີ	ີ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ຶ	ຶ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ື	ື	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ູ	ູ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ັ	ັ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ຳ	ຳ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ີ	ີ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ື	ື	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ
ົ	ົ	ຢ	ຢ	ີ	ຶ	ຄ	ິ	ື	ູ	ັ	ຳ	ີ	ື	ົ	ັ	ີ	ື	ົ

Page46 CP856 ()

Code page 856																		
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F		
8_	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П		
9_	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я		
A_	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п		
B_	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я		
C_	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ը	Ծ	Ը	Ծ	Ը	Ծ	
D_	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ը	Ծ	Ը	Ծ	Ը	Ծ	
E_	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ծ	Ը	Ը	Ծ	Ը	Ծ	Ը	Ծ	
F_	=	±	≥	≤			÷	=	°	.	.	√	n	2	■			

Page47 Cp874

Code page 874																		
	_0	_1	_2	_3	_4	_5	_6	_7	_8	_9	_A	_B	_C	_D	_E	_F		

8_	ଟ୍ୟୁ					...										
9_		'	,	"	"	•	-	—								
A_	କ	ଖ	ଞ	ଚ	ମ	ଙ	ଗ	ଜ	ଝ	ଞ	ଛ	ଚ	ଘ	ଲୁ	ବୀ	ବୀ
B_	ଙ୍ଗୀ	ଥ	ତୁ	ଣ	ଢ	ତ	ତୀ	ଥ	ନ୍ଦ	ନ	ବ	ପ୍ର	ଫ୍ର	ଫ	ଫ	
C_	କି	ମ	ଯ	ର	ଟି	ଲ	କି	ରା	ଶ	ଷ	ଲ୍ଲ	ହ	ଫ୍ରେଂକ	ଏ	୧	
D_	ଙ	ଙ୍କ	ରୀ	ଙ୍କୀ	ଙ୍କି	ଙ୍କୀ	ଙ୍କୀ	ଙ୍କୀ	ଙ୍କୀ	ଙ୍କୀ	ଙ୍କୀ				ଙ୍କୀ	
E_	ୱ	ୱୁ	ରୀ	ୱୀ	ୱୀ	ରୀ	ୱୀ	ୱୀ	ୱୀ							
F_	୦	୭	ଙ୍କ	୩	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	୩୦୦୧	

8.2 International character set

Country	ASCII Code(Hex)													
	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E		
U.S.A.	#	\$	@	[\]	^	`	{		}	~		
France	#	\$	à	°	ç	§	^	`	é	ù	è	“		
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß		
U.K.	£	\$	@	[\]	^	`	{		}	~		
Denmark I	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~		
Sweden	#	¤	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü		
Italy	#	\$	@	°	\	é	^	ù	à	ò	è	ì		
Spain I	Pt	\$	@	í	Ñ	¿	^	`	..	ñ	}	~		
Japan	#	\$	@	[¥]	^	`	{		}	~		
Norway	#	¤	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü		
Denmark II	#	\$	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü		
Spain II	#	\$	á	í	Ñ	¿	é	`	í	ñ	ó	ú		
Latin	#	\$	á	í	Ñ	¿	é	ü	í	ñ	ó	ú		
Korea	#	\$	@	[₩]	^	`	{		}	~		
Slovenia/Croatia	#	\$	Ž	Š	Đ	Ć	ž	š	đ	ć	č	č		
China	#	¥	@	[\]	^	`	{		}	~		

8.3 QR Code Demo

QR code test data (Hexadecimal)

1b 40

1d 28 6b 03 00 31 43 03

1d 28 6b 03 00 31 45 30
1d 28 6b 06 00 31 50 30 41 42 43
1b 61 01
1d 28 6b 03 00 31 52 30
1d 28 6b 03 00 31 51 30

Introductions:

1b 40

Printer initialization

1d 28 6b 03 00 31 43 03
Set QR Code Graphic unit module to 3dots x 3dots

1d 28 6b 03 00 31 45 30
Set QR code Checking Level to L

1d 28 6b 06 00 31 50 30 41 42 43
Transmit QR Code Date “ABC”

1b 61 01

Graphics centered

1d 28 6b 03 00 31 52 30
Check if QR code date is normal

1d 28 6b 03 00 31 51 30

Print QR code